




Instruction and Safety Manual

20' Grip Stick with Grip Jaw System

MODEL: PVSL-140

- Always Wear a Safety Harness with this Product
- Practice Using at Ground Level
- Weight Limit: 300 lbs.
- Tree Size: 9"-18" diameter

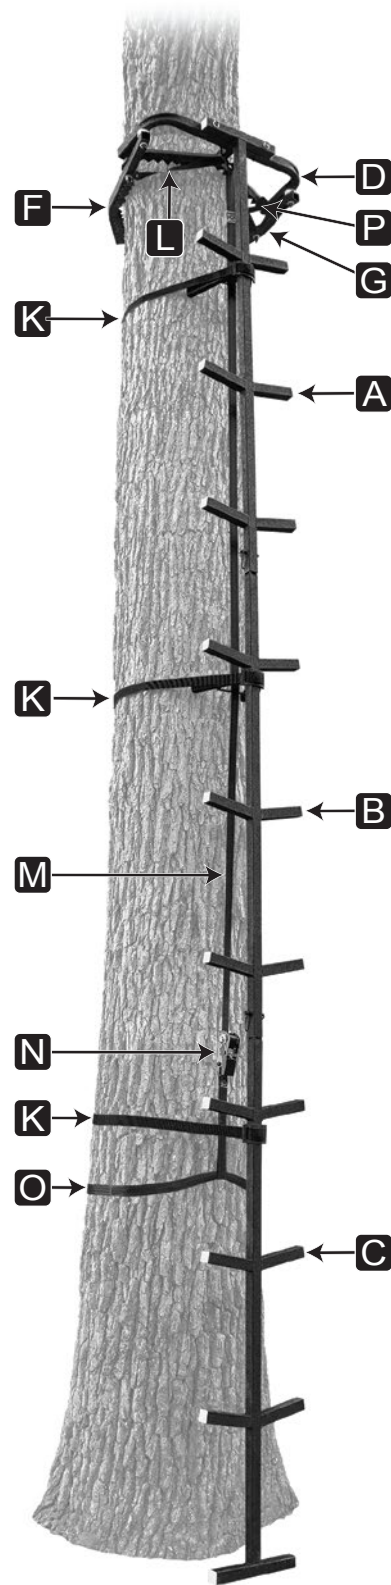

Thank you very
much for choosing



We appreciate
your business!



WARNING

SAFETY MUST BE YOUR FIRST PRIORITY WITH THIS PRODUCT

Every year serious injury or death can occur from hunting related accidents. To ensure your safety, please **completely** read and follow this safety manual and **all warning** labels **before** assembling, installing or utilizing this product.

Do not use this product before fully understanding all safety warnings and instructions. If you have questions, are unsure about any information or need additional information concerning your product, contact our customer service department at 1-866-972-6168 or visit www.Primaloutdoors.com. Keep and maintain this safety and instruction manual in a safe location for future reference.

Distributed by Primal Brands, LLC, 1745 Shea Center Drive 4th Floor, Highlands Ranch, CO 80129

©2023 (rev. 1/23)

Customer Service Department 1-866-972-6168

www.primaloutdoors.com

Treestand Safety Warnings

Please read the following instruction manual and warnings labels completely before utilizing this product. Failure to understand and execute the instructions and warnings may result in serious injury or death. In the event of an accident, have a plan for rescue, including the use of devices that may be easily reached while suspended.

ALWAYS read and understand all warnings and instructions. Watch the Safety Video through the QR Code located on the product and packaging in its entirety before doing anything with this product including assembly, installation etc. before each use of this product. Failure to read and understand all warnings and instructions and QR Code material may result in serious injury or death. Contact a Customer Service Representative with any questions you may have.

NEVER exceed total weight limit of **300 lbs.** **DO NOT** use if your combined weight with all of your individual hunting gear and any accessories exceeds **300 lbs.** Use of tree stand over the weight limit may result in serious injury or death.

DO NOT use this tree stand while under the influence of alcohol, medication or any illegal substances. Use of tree stand while under the influence of any of these substances may result in serious injury or death.

NEVER use this treestand during inclement weather. **DO NOT** use tree stand during thunderstorms, snowstorms, hurricanes, tornadoes or any other weather conditions that include (but not limited to) lightning, icy conditions, or high winds that could create slippery or dangerous situations. End your hunt and return to the ground if inclement weather conditions arise.

NEVER use treestand If you are feeling ill, nauseous, dizzy or if you have a prior condition that could cause a problem. i.e., heart condition, joints that lock-up spinal fusions, etc., or if you are not well rested and alert. Physical ailments can reduce your ability to safely install, utilize, and remove your treestand. Please consult a physician prior to use.

NEVER use this tree stand if you have a history of health problems such as (but not limited to) heart problems, back problems, high blood pressure, impaired vision, equilibrium impairments, are afraid of heights, have been advised by a doctor or physician not to climb, if you are not physically fit, well rested, and alert, or if you have any other physical or mental condition that would impair your ability to properly use this treestand.

NEVER use this tree stand on a tree that is dead, leaning, diseased, loose barked or on a utility pole as the tree may fall, break, or uproot and may result in serious injury or death. **NEVER** rely on a branch for support.

NEVER jump or bounce on the treestand's platform or ladder sections to seat it to the tree. Instead, step firmly on the first rung of the bottom ladder section to set the ladder into the ground before proceeding to climb the ladder.

NEVER transport any of your equipment with yourself while ascending or descending the tree. You will need to have two hands free during ascending and descending for safety. Use a haul line to pull up your firearm (unloaded, chamber opened with safety lock engaged, barrel facing towards the ground), bows, arrows, knives or any other equipment to your tree stand once you have reached your desired hunting height. **ONLY** pull up hunting equipment after the tree stand has been secured to the tree and after you and your harness have been secured to the tree. Prior to descending, lower your equipment on the opposite side of the tree from which you are climbing. Make sure that the unloaded firearm's safety lock is engaged and the gun barrel is pointing towards the ground.

ALWAYS hunt with a plan and a buddy. Before you leave home, let others know your exact location, when you plan to return and who is with you.

ALWAYS carry emergency signal devices such as a cell phone, walkie-talkie, whistle, signal flare, PLD (personal location device) and flashlight with you at all times and within reach even while you are suspended in your harness. Watch for changing weather conditions. In the event of an accident, remain calm and seek help immediately.

ALWAYS inspect the tree stand and the **Fall Arrest System (FAS)** (Harness) for signs of wear or damage **BEFORE** each use. Also inspect to ensure that nuts and bolts are secure. Pay special attention to the harness and straps, guaranteeing that nothing has been frayed or severed. Destroy all products that cannot be repaired by the manufacturer. Contact a Customer Service Representative for replacement parts. The Fall Arrest System **MUST** be discarded and replaced after a fall has occurred.

DO NOT ATTACH YOUR FULL BODY HARNESS TO YOUR TREESTAND.

NEVER modify your treestand in any way by making repairs, replacing parts, or altering adding or attaching anything to it except if explicitly authorized in writing by the manufacturer. Improper installation or adjustment may cause serious injury or death. Remove all contents from box. Inspect for any damaged or missing parts. If any parts are missing or damaged, you must only use certified replacement parts. Using any other replacement parts will void product warranty. **THERE ARE NO EXTRA PARTS.** All parts **MUST** be used to ensure the safety of you and your stand. If you think parts are missing or damaged, **STOP IMMEDIATELY** and contact our Customer Service Department. Using the tree stand with missing or damaged parts may result in serious injury or death. **DO NOT** return this product to the retailer. Contact a Customer Service Representative if you have any missing, damaged or extra parts.

ALWAYS keep instructions in a safe place and review before each use. It is the responsibility of the treestand owner to furnish the complete instructions to anyone who borrows or purchases the treestand from you. The QR Code located on your product and packaging is linked to a treestand hunting video. View it in its entirety prior to using this product.

NEVER use this treestand for any use other than hunting. Our treestands are designed for hunters to wear a Full Body Harness. If you are not completely comfortable and confident with your ability to safely install, ascend, hunt and descend using a Full Body Safety Harness and this treestand, **DO NOT PROCEED.**

NEVER use this treestand for trimming trees.

NEVER fall asleep in your stand as you may fall out resulting in serious injury or death.

ALWAYS be sure to re-tighten all bolts **BEFORE** each new use of treestand.

ALWAYS have a minimum of three people present when installing or removing this treestand.

Treestand Safety Warnings

NEVER adjust your stand while in use. Practice the attachment of this treestand at ground level before using in a hunting environment. **ALWAYS** ensure that you and your treestand are safely secured to a healthy tree. Your tree stand **MUST** be attached tightly to the tree and secured in place. If the stand is not secure, it may shift while in use, resulting in serious injury or death.

The Installation Cross Straps and Truss Assembly System **MUST** be properly installed before each use of the treestand.

ALWAYS inspect every ladder section connection every time you use the stand before you leave the ground. If ladder sections are separating, with the help of at least two other people, lower the stand to the ground, make adjustments, and reinstall.

ALWAYS check the ground below the tree stand to make sure it is firm and level. Sloping ground or uneven terrain (one side of a rock or root) can cause your tree stand to tilt or shift.

ALWAYS maintain three points of contact when climbing the tree stand. (Two feet and one hand **or** one foot and two hands.)

ALWAYS lean forward as you climb and attach your harness to the tree before securing the platform to the tree and stepping onto the platform.

DO NOT leave your treestand outside since weather or animals may cause damage. Tree growth can also cause stress and damage straps and buckles. It must be stored inside, free of moisture, when not in use.

NEVER wear jewelry or loose fitting clothing, which can cause hazardous conditions. Clothing may be caught in your equipment and cause you to fall. You must always wear non-slip or rubber boots. Shoelaces must be tucked into your boots. Rings and necklaces **MUST NOT** be worn.

NEVER let children use this treestand without adult supervision. This treestand is not a toy. No one under the age of 18 should attempt to use this product without direct adult supervision.

DO NOT use tree stand if any nuts or bolts or parts are loose, bent, or crooked.

ALWAYS know your physical limitations. Don't take chances. If you start thinking about how high you are, don't go any higher. Instead, choose a minimum height that will allow for safe, effective and comfortable hunting.

ALWAYS lean **forward towards the tree** as you climb and attach your harness to the tree **BEFORE** securing the platform to the tree and stepping onto the platform. **NEVER** lean out from the treestand for any reason.

ALWAYS wear a Fall Arrest System (FAS) (Harness) consisting of a full body safety harness after leaving the ground. A Full Body Harness that meets the requirements of ASTM Test Method F2337 **MUST** always be connected to yourself and the tree during ascending, hunting and descending. Single safety belts and chest harnesses are no longer allowed and should **NEVER** be used. If you are not wearing a Full Body Harness properly attached to the tree, that is protecting you from a fall, **DO NOT leave the ground**. Failure to wear your Full Body Harness may result in serious injury or death. Be aware that falls can occur at anytime after leaving the ground.

ALWAYS read and understand the manufacturer's Warnings, expiration date (if applicable) and instructions on how to use and how to properly adjust the harness. Practice the use of a full body safety harness at ground level in the presence of a responsible adult to experience the feeling of hanging suspended before using in a hunting environment. Failure to follow harness instructions may result in not being able to return to the stand and being suspended in a harness after a fall, or serious injury or possibly death. If the hunting location is unknown by anyone and communication efforts are unsuccessful, you **MUST** have a personal plan for rescue/escape because prolonged suspension in a harness may be fatal. It is important to exercise the legs by pushing against the tree or doing other forms of continuous leg exercises to avoid blood pooling while being suspended. Hunters with varying degrees of physical fitness may require different plans to recover/escape the effects of prolonged suspension. Have a personal plan and practice it in the presence of a responsible adult before leaving the ground. No one escape/rescue plan will work for every hunter on every tree in every circumstance. Only you can determine the best recovery/escape plan for your situation before leaving the ground.


ALWAYS have a suspension relief device on your person and readily accessible while using a harness. These devices allow the user to relieve the load on the lower extremities if suspended in a harness and help maintain circulation in the legs, mitigate suspension trauma (blood pooling) or allow descent to the ground. Several optional products/systems are available that offer self-recovery or self-extraction from a fall when suspended in a harness. Some systems automatically descend the user while others allow user control. One of these products/systems can be considered for use as an additional safety precaution against prolonged suspension and suspension trauma. Be sure to follow the manufacturers' instructions on the safe use of these products/systems.

Hunt from the ground when self-recovery escape is absent. There is time to make a correct decision on what action to take if a fall occurs while wearing a full body harness. It is important to remember "**DO NOT PANIC.**" Remain calm and implement your practiced rescue, relief and recovery plan.

NEVER allow the tether strap to get under your chin or around your neck. The length of the harness tether **MUST** be minimized at all times. It should be adjusted so that it is above the head with no slack (snug) in the sitting position and you should have the minimum amount of slack possible when climbing.

NEVER remove any safety warning stickers from this product.

Safety must be your first priority during the use of this product.

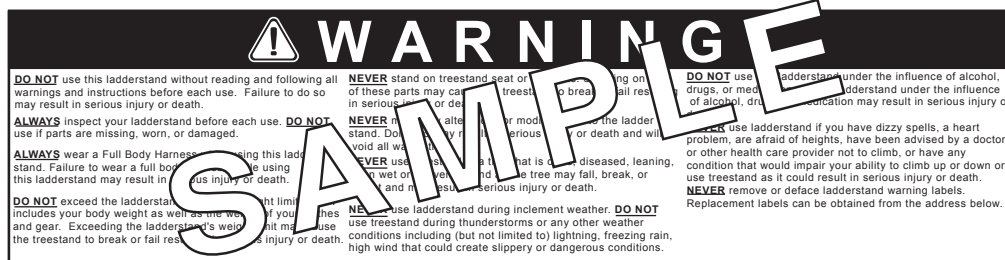

Choosing A Safe Tree

- **ALWAYS** thoroughly inspect the tree before installing your product. **DO NOT** install your **TREE/LADDER STAND** onto any dead or unsafe tree, telephone or utility pole, structural column, or man-made structure. Doing so may result in serious injury or death.
- **ALWAYS** select the proper tree for use with your **TREE/LADDER STAND**. Select a live straight tree that fits within size limits recommended (minimum tree diameter must be no less than 9 inches and maximum of 18 inches.). **DO NOT** rely on a branch for support.
- **DO NOT** select a tree in the dark or choose a tree in close proximity to a fence. You must not have any stumps or rocks beneath your tree.
- **NEVER** use **TREE/LADDER STAND** on a tree that is dead, diseased, leaning or on wet and uneven ground as the tree may fall, break or uproot.
- Your tree must not be wet, icy or slippery or on wet, swampy, or loose ground that allows the tree to be unstable. Check the ground under **TREE/LADDER STAND** to ensure it is firm and level.
- Be sure you have a level stand platform. Your tree must not lean or have any irregular shape.
- Tree must not have any loose or scaly bark or excessive vines, nails, screws, or any other sharp objects protruding that may sever webbing on product. Any surrounding trees must not lean or have dead limbs that may fall onto you or your product.
- **NEVER HURRY!! HURRYING CAUSES ACCIDENTS!!** While climbing a **TREE/LADDER STAND**, make slow, even movements no more than ten to twelve inches at a time. Make sure you have proper contact with tree and/or **TREE/LADDER STAND** every time you move. On ladder tree stand, **ALWAYS** maintain three points of contact with each step up the ladder and **ALWAYS** lean forward as you climb.

Several treestands are equipped with a footrest, armrests and/or shooting rail. Neither the footrest, armrests nor the shooting rail have been designed to support a user's weight. Under **NO** circumstances should you place more than fifteen (15) pounds of weight on these structures. Doing so will put the user in serious risk of injury or death.

Proper Care And Maintenance:

- Inspection for defects (damage, rot, corrosion, cracks, freezing, excessive heat, etc.) before every use is required. Do not use if damage is detected or suspected.
- We recommend replacing all hardware/cables/nuts/bolts/clips on your tree stand every two (2) years or sooner if inspection finds it necessary. Use only Primal Brands, LLC approved replacement straps and parts. Use of any other straps or parts, will be viewed as a modification to the product. Any modification will void the warranties and relieve Primal Brands, LLC from all liabilities. Failure to follow these instructions may result in serious injury or death.
- **DO NOT** overtighten the hardware. **DO NOT** use a socket wrench. This can lead to structural damage and may negatively affect the performance of your stand. Failure to follow these instructions may result in serious injury or death.
- All photos are taken from the front view unless otherwise noted.
- In most cases, bolts come with two nylon washers. One washer will be placed against the bolt head the other washer will be placed against the nut.



20' Grip Stick with Grip Jaw System

MODEL: PVSL-140

- Always Wear a Safety Harness with this Product
- Practice Using at Ground Level











- Weight Limit: 300 lbs.
- Tree Size: 9"-18" diameter

PARTS LIST


- A** 1 Top Ladder Section.....Part # PTL-140
- B** 3 Middle Ladder Section.....Part # PML-140
- C** 1 Bottom Ladder Section.....Part # PBL-140
- D** 1 Tree Brace.....Part # PJB-140
- E** 5 Ladder Braces.....Part # PTB-140
- F** 1 Left Ladder Jaw.....Part # PLLJ-140
- G** 1 Right Ladder Jaw.....Part # PRLJ-140

HARDWARE BOX P/N 140H


- H** 5 Brackets.....Part # DB-100
- J** 4 M6 Quickclips.....Part # 1615
- K** 5 Buckle Straps.....Part # PBS-140
- L** 1 Horizontal Jaw Assembly Strap...Part # PHJS-140
- M** 1 Vertical Jaw Assembly Strap.....Part # PVJS-140
- N** 1 Jaw Assembly Ratchet Strap.....Part # PRS-140
- O** 1 Jaw Assembly Tree Buckle.....Part # PTB-140
- P** 1 Tree Strap Buckle.....Part # CM-02
- Q** 1 Tree Strap Hook.....Part # PTSH-140
- (45) 2 M8x45mm Bolts.....Part # 1245
- (65) 7 M8x65mm Bolts.....Part # 1265
- (77) 2 M8x75mm Bolts w/spacers.....Part # 1877

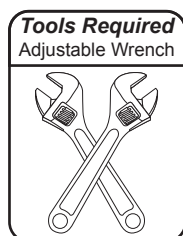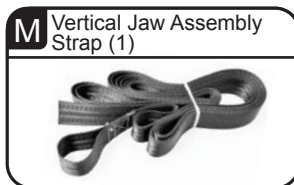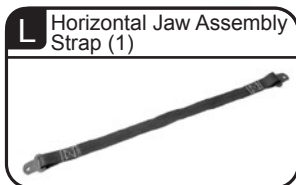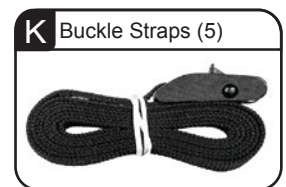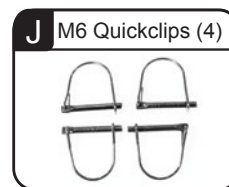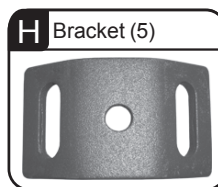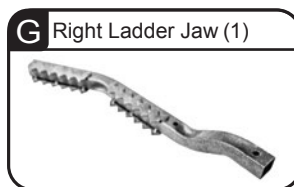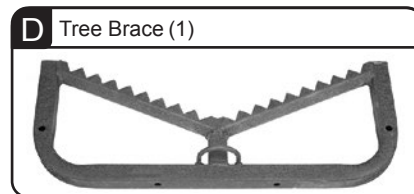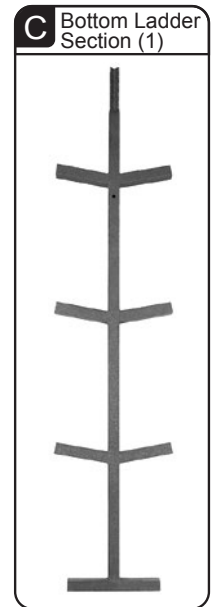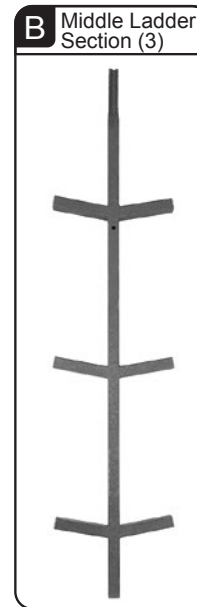


Remove all contents from packaging and make sure all parts are present before attempting to assemble.

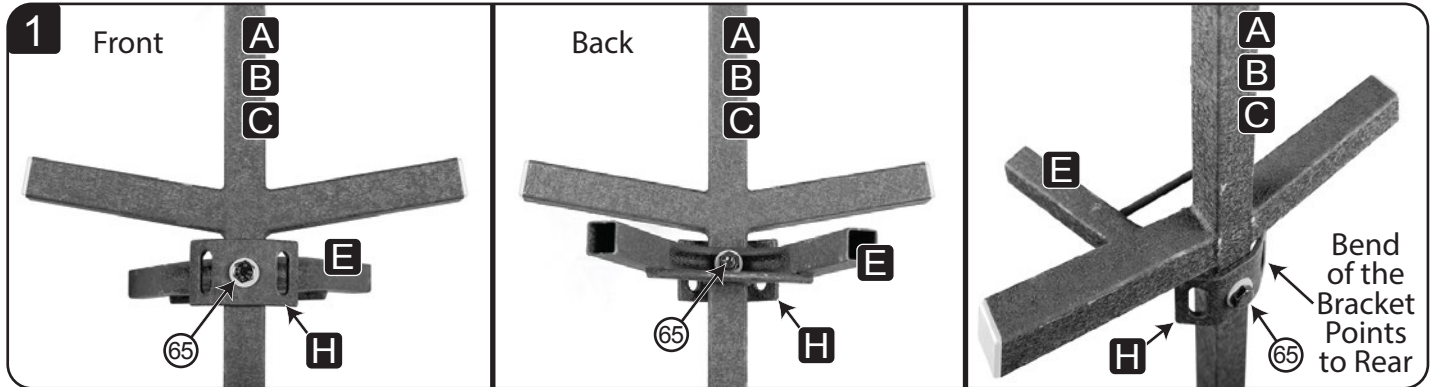

- 1** Attach Bracket **H** to the front of each Ladder Section **A B C** and Ladder Brace **E** to the back of each Ladder Section **A B C** using **1-M8 x 65mm bolts (65)** for each section.


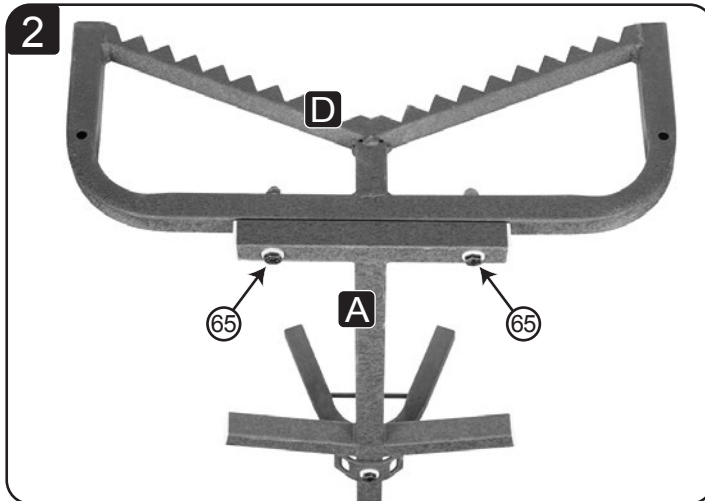


- 2** Attach Tree Brace **D** to the back side of the Top Ladder Section **A** using **2-M8 x 65mm bolts (65)**.

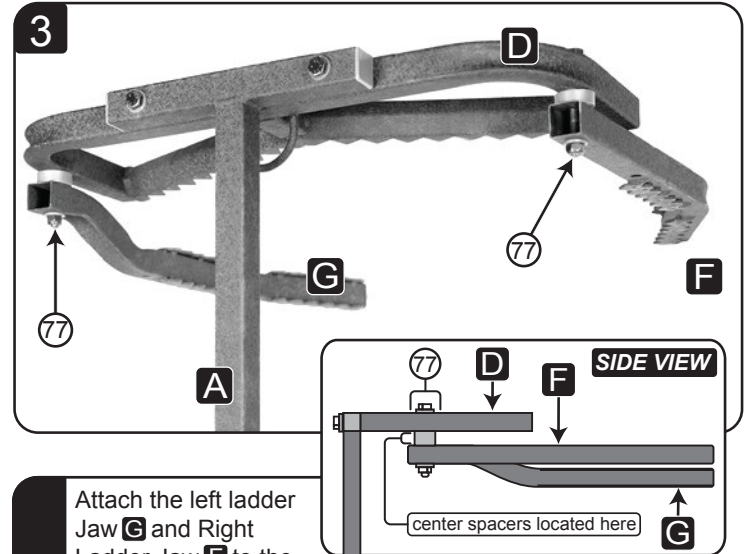

- 3** Attach the left ladder Jaw **G** and Right Ladder Jaw **F** to the Tree Brace **D** using **2-M8 x 75mm bolts w/spacers (77)**.

NOTE: These bolts should be tight enough to keep the Jaws from swinging freely but loose enough to be engaged when the Jaw Strap Assembly is tightened.

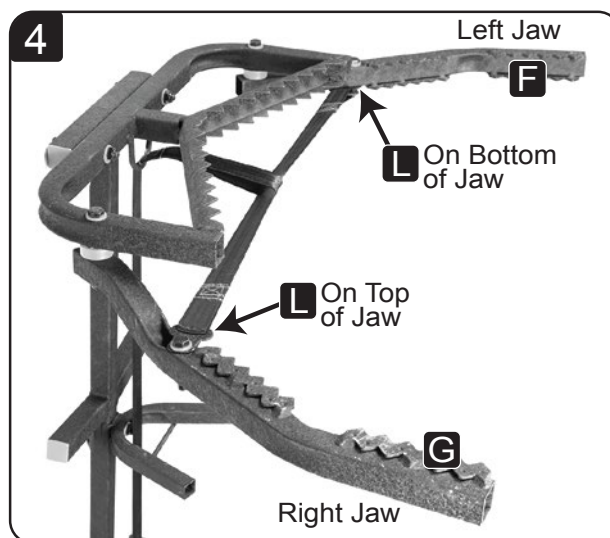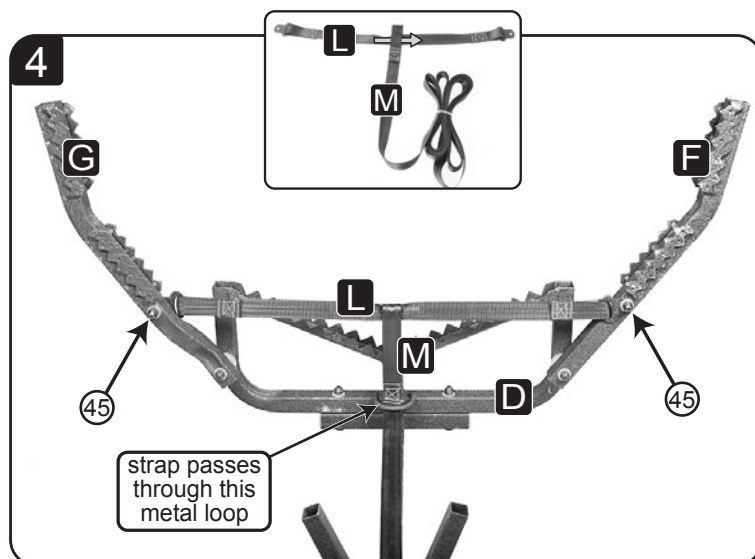


Lay Top Ladder Section assembly down with the front facing down and the Jaws are facing upward. With Horizontal Jaw Assembly Strap **L** passed through the top loop of Vertical Jaw Assembly Strap **M**, connect the right/left ends of the Horizontal Jaw Assembly Strap **L** to Jaws as described. **NOTE: The bolts must be inserted as follows.**


4 Right Jaw (curved) G - Insert **1-M8x45mm bolt (45)** through the Horizontal Jaw Assembly Strap fastener and then through the top of the Right Jaw **G**. **Strap on TOP of jaw.**

Left Jaw (straight) F - Insert **1-M8x45mm bolt (45)** through the top of the Left Jaw **F** and then through the Horizontal Jaw Assembly Strap fastener. **Strap on BOTTOM of jaw.**

Check to make sure that Vertical Jaw Assembly Strap **M** is passing through the metal loop on tree brace **D**.



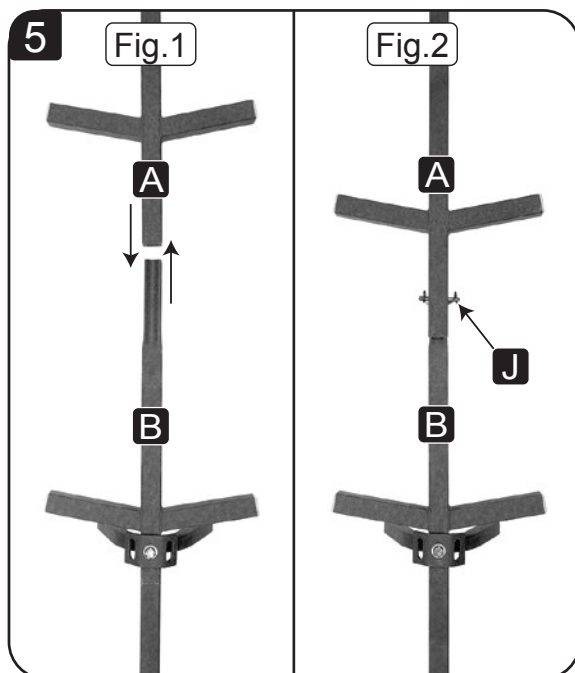


5 Insert the top end of a Middle Ladder Section **B** into the bottom end of Top Ladder Section **A** and secure using **1-M6 Quickclip J**.
Connect the two remaining Middle Ladder Sections **B** followed by the Bottom Ladder Section **C** by following the same steps and securing all with **M6 Quickclips J**.

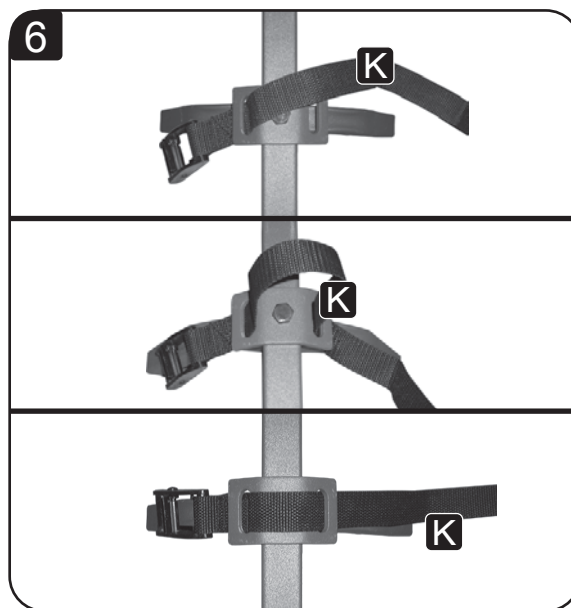


6 Thread the Buckle Strap **K** through one end of the Bracket **H** from the back side and insert it into the other side of the Bracket. Pull the Buckle Strap **K** all the way through so the buckle end is against the Bracket **H**. The straps will be attached to the bracket and hang freely until the Stick Ladder is ready to be secured to the tree.

⚠ WARNING Make Sure All Bolts Are Tight Before Proceeding Ladder Installation

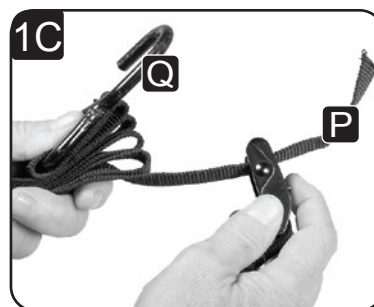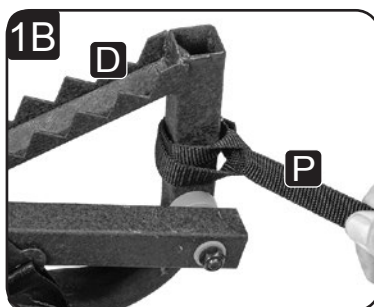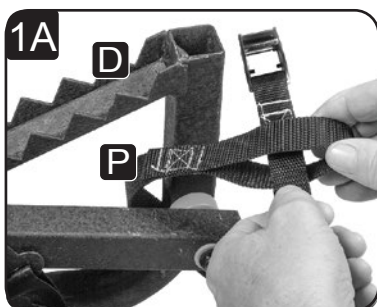



- 1 Pass the loop end of the Tree Strap Buckle **P** behind and through the Tree Brace **D**. Insert the buckle end of the Tree Strap Buckle **P** through the loop and pull tight. Insert the tag end of the Tree Strap Hook **Q** into the buckle of the Tree Strap Buckle **P**. See *"Detailed Buckle and Strap Instructions"* for correct operation of the Tree Strap Buckle.

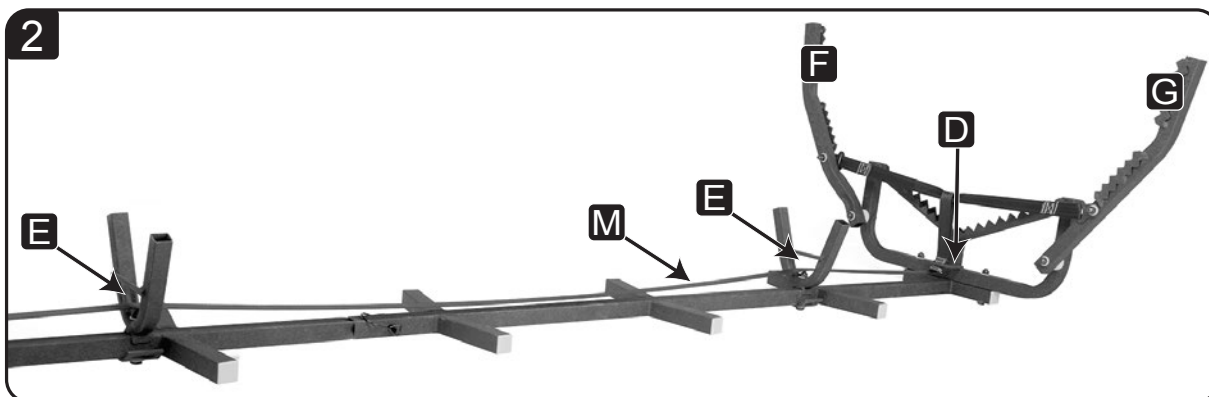

- 2 Lay the Stick Ladder on its front side at the base of the desired tree. **DO NOT** use on a leaning or dead tree. The tree should also have a diameter between 9 and 18 inches.
Make sure the Ladder Jaws **F** **G** are in an open position. Thread the Vertical Jaw Assembly Strap **M** through the metal loop in the Tree Brace **D** and through each Ladder Brace **E** of each stick ladder section.

- 3 With the help of a friend, walk the assembled stick ladder up to the tree so that all of the tree braces are firmly against the tree. The stick ladder **MUST** be straight and vertical.
While holding the stick ladder against the tree, press your weight on the first step so that the base of the bottom section settles firmly and completely into the ground.
Check to make sure the Vertical Jaw Assembly Strap **M** is not caught, tangled or snagged. Make sure the strap falls flat and straight from the metal loop connected to the Tree Brace **D**.
Pull on Vertical Jaw Assembly strap **M** to check to make sure that both ladder jaws close in on the tree trunk.

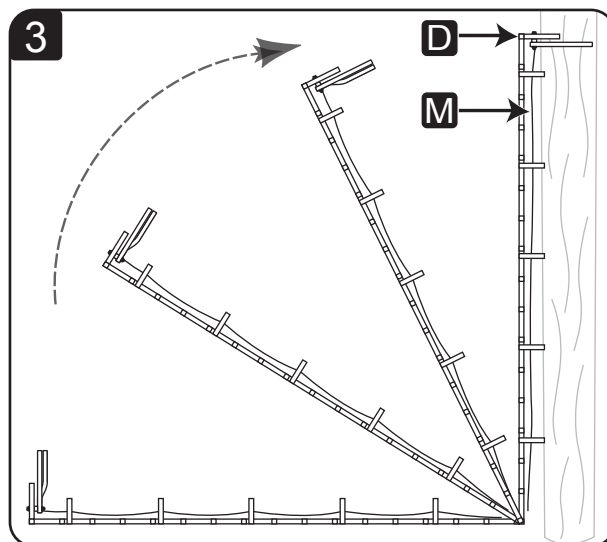


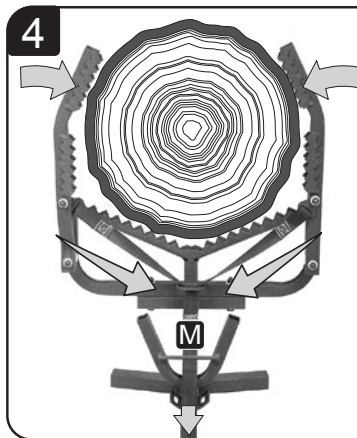

NOTE: The Ladder Jaws are designed to wrap around a tree trunk when Vertical Jaw Assembly Strap **M** is tightened.

Before engaging the Ladder Jaw Mechanism:


- 1) Check that the Ladder stand is properly installed on correct sized tree. If the ladder jaws **F** **G** cannot close on the tree trunk, the tree is too large for safe installation.
- 2) The ladder base is correctly and safely secured onto level ground.

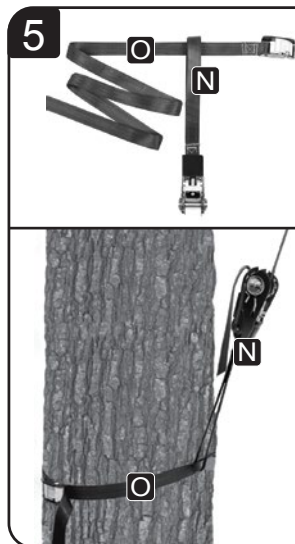

Loop Jaw Assembly Tree Buckle **O** through Jaw Assembly Ratchet Strap **N**.

With the Jaw Assembly Ratchet Strap **N** attached, wrap Jaw Assembly Tree Buckle **O** around tree trunk at a lower diagonal point from the lowest Tree Brace **E**. Feed Jaw Assembly Tree Buckle strap through the spring loaded cam buckle and firmly tighten around tree trunk. (See "Tree Buckle Strap Instruction").

Position Jaw Assembly Ratchet Strap **N** so that it faces the ladder. Feed Vertical Jaw Assembly Strap **M** through ratchet strap **N** and ratchet the strap tight until the tension closes the ladder jaws. (See "Ratchet Strap Instruction").

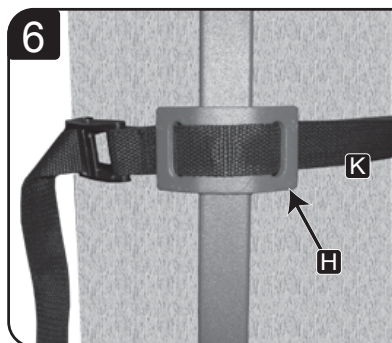


Wrap the Buckle Strap from the bottom section around the back of the tree and insert the strap through the buckle. Make sure that the strap is flat against tree with no slack. Secure section to the tree before climbing. (See "Buckle Strap Instruction").

Put on your Fall Arrest System with Climbing Belt and attach to the tree according to the manufacturer's instructions.


7 Climb the Bottom Ladder Section **C** of the stick ladder to reach the Second Section. Stand on the Bottom Section **C** to secure the second strap to the Middle Section. Make sure section is secure before climbing any further.

8 Continue with step 6 for the rest of the sections.

9 When installing and removing stick ladder sections do not undo any strap until you are standing securely on the section below.

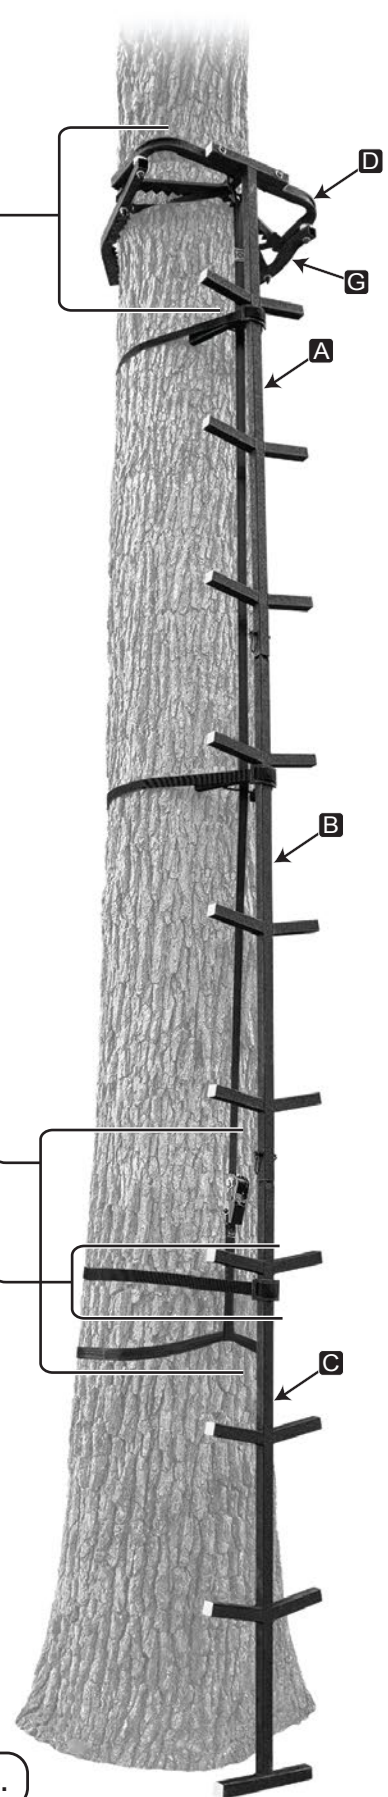

NOTE: Follow these instructions in reverse to remove your ladder stand from tree.

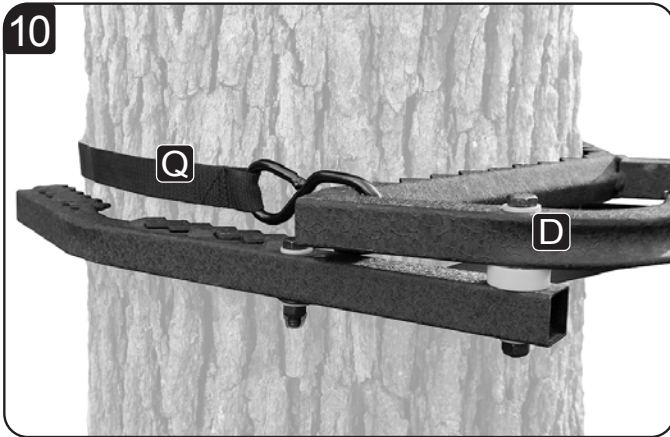

10 With the Grip Jaw System and all Buckle Straps tightened, climb to the top of the stick ladder. Wrap the Tree Strap Buckle **P** around the tree once and hook the Tree Strap Hook **Q** onto the Tree Brace **D**. Once hook is secure to the Tree Brace **D**, pull the tag end of the Tree Strap Hook **Q** to tighten the Tree Strap Buckle **P** to tree.

⚠ WARNING

ALWAYS use Fall Protection with this Ladder System. Make sure that your tether is **ALWAYS** mounted **ABOVE** you as you climb and install the ladder sections.

BEFORE you leave the ground, check every Ladder Section for stability.





⚠ WARNING

ONLY set stand where you are able to step **DOWN** onto stand platform from the Grip Stick.






DO NOT set stand above the top of the Grip Stick section.

It will create a dangerous situation when climbing in or out of stand.



DETAILED TREE BUCKLE STRAP INSTRUCTIONS

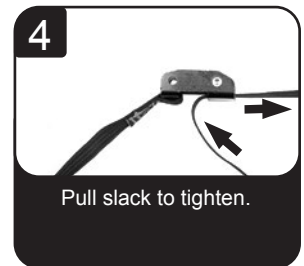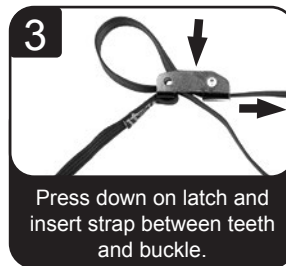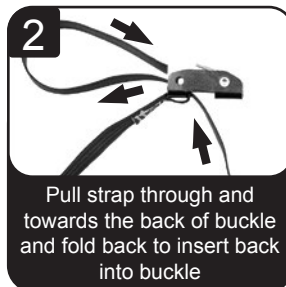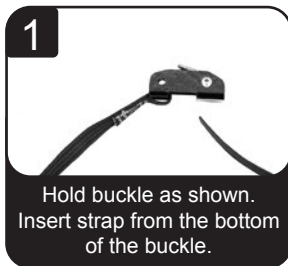

DETAILED RATCHET STRAP INSTRUCTIONS

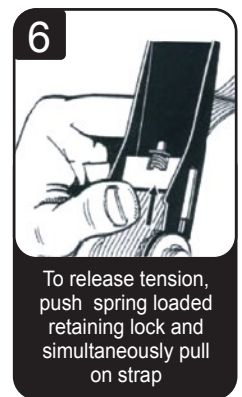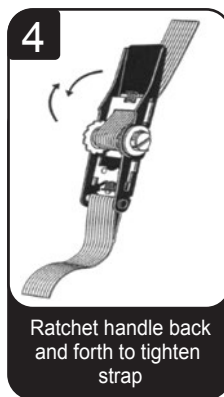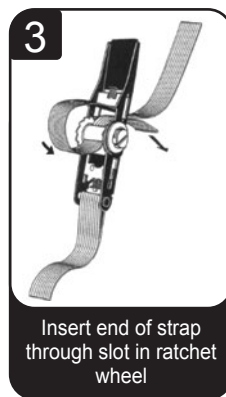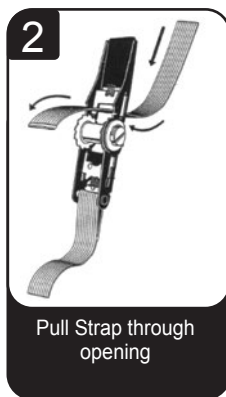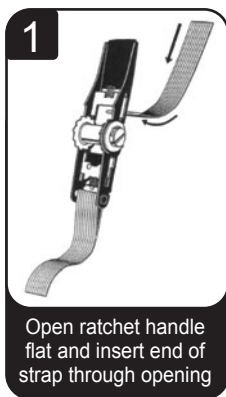

DETAILED BUCKLE STRAP INSTRUCTIONS

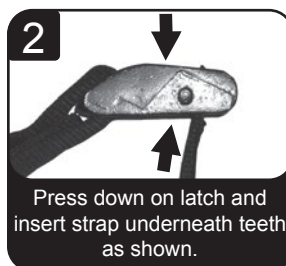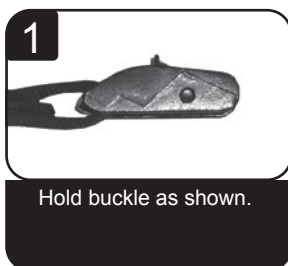



WARNING

Failure to follow all warnings listed below could result in serious injury or death.

ALWAYS read and understand all warnings and instructions before each use of this product. Failure to read and understand all warnings and instructions may result in serious injury or death.

ALWAYS inspect the tree stand for signs of wear or damage **BEFORE** each use. Also inspect to ensure that nuts and bolts are secure and straps are not frayed, worn, or broken.

NEVER exceed weight limit of **300 lbs.** **DO NOT** use if your combined weight with all your hunting gear and any accessories exceeds **300 lbs.** Use of tree stand over the weight limit may result in serious injury or death.

ALWAYS wear a Fall Arrest System (FAS) consisting of a full body harness with lineman's belt after leaving the ground. You **MUST** stay connected at all times after leaving the ground. If you are not wearing an FAS that meets the requirements of ASTM Test Method F2337, **DO NOT leave the ground.** Failure to wear an FAS may result in serious injury or death.

DO NOT use this tree stand while under the influence of alcohol, medication, or illegal substances. Use of tree stand while under the influence of any of these substances may result in serious injury or death.

NEVER use this tree stand if you have a history of health problems such as (*but not limited to*) heart problems, back problems, impaired vision, equilibrium impairments are afraid of heights or have been advised by a doctor not to do any strenuous activity. If you are feeling ill, nauseous, or dizzy **DO NOT** use this tree stand or if you are not physically fit, well rested and alert. Physical ailments can reduce your ability to safely install, utilize and remove your tree stand.

NEVER use this tree stand during inclement weather such as (but not limited to) thunderstorms, snowstorms, hurricanes, icy conditions, or high winds that could create slippery or dangerous situations.

NEVER use this tree stand on a dead, leaning, loose barked tree or on a utility pole as the tree may fall, break, or uproot and may result in serious injury or death.

NEVER leave the ground without checking every ladder section connection to ensure they are firmly connected. If ladder sections are separating, with the help of at least two other people, remove the tree stand from the tree, tighten all connections and reinstall on the tree.

NEVER step up to the platform. Climbing aids such as stick ladders, **MUST** extend above the platform of the hang-on to allow the user to step down on the platform. The Full Body Harness **MUST always** be attached to the tree even when stepping down into the tree stand.

DO NOT modify or alter your tree stand.

NEVER remove or deface warning labels.

Manufactured in the year 2023 Primal Brands, LLC, 1745 Shea Center Dr Fl 4, Highlands Ranch, CO 80129 1-866-972-6168

