



Quick Start Guide

Compax One™ is a new and revolutionising waste bin that makes waste mangement in buildings more efficient and sustainable.



Become Sustainable



Save Resources



Enhance Hygiene

Compax One™

Compax One is the wall-mounted compactor for handling paper towel waste in both small and large buildings.

Table of contents

Bags	p. 3
Bag Change	p. 4
LED Indicator	p. 5
Cleaning	p. 6
Service and Support	p. 7



Bags

To ensure proper function of Compax One you need to only use Compax One Original Bags™, which are included in the service agreement. Any use of other bags may void service and guarantees.

Bag Change

The LED light on the top of Compax One will show a yellow light when it is time to change the bag.

To ensure that the unit is functioning properly, it is important that the bag is mounted correctly.

Please see the simple steps on the next page, or watch the instruction video at:

www.compaxsolutions.com/guides/bag-change

Consumption

A normal consumption of Compax Original Bags™ is included in our plan (see service agreement for details).

If you need more bags, you can order this at www.compaxsolutions.com/support

Bag Change



Mount the bag on the rear mounting bracket.



Pull the bag around the corners of the bag holder.



Make sure the bag hangs straight and does not fold up.



Mount the bag on the front mounting bracket.








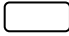
Pull the bag down to make sure it sits properly on the brackets.



Use your hand to make sure the bag is open.

LED Indicator

On the top of Compax One you will find an LED light. This light is used to indicate the unit's status and it can be useful to get familiar with what the different lights mean.

Light	Status	Necessary Action
 Green	Standby	None
 Orange (flash)	Lid is moving	None
 Blue	Ongoing compression	None
 Yellow	Bag is full	Change bag
 Purple	Error occurred	Contact Compax Support
 No light	No power	Check power connection and contact Compax Support

See a complete overview of all lights on www.compaxsolutions.com/guides/led-lights

Cleaning

To make sure Compax One is working as intended, it needs regularly cleaning. This is done quick and easy by wiping the surfaces with a damp cloth..



All exterior surfaces should be wiped with a damp cloth.



To ensure proper compression, the surfaces inside the lid should also be wiped.



The sensor housing needs cleaning to ensure it reads the correct waste level.

Service and support

Compax Solutions delivers service and support (see service agreement for details).

Support

Updated information about the product is always available at:

www.compaxsolutions.com/support

Here you will also find contact information in case you need to talk to customer support.

Service

If a technical issue should occur you need to notify customer support at:

www.compaxsolutions.com/support

Our support team will first attempt to solve the issue remotely. If this is not possible, a service technician will resolve the issue at your location.