
Click to verify

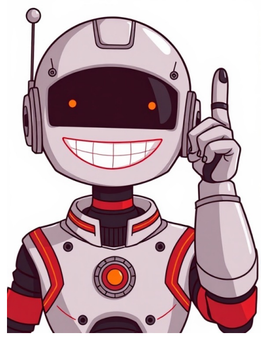

Pachislo Slot Machine: Troubleshooting Stuck Settings Screen Are you having trouble getting your Pachislo slot machine out of settings mode and into play? You're not alone. Many users have experienced this issue after purchasing a used or refurbished machine. One user recently shared their experience with the God game, Muzuho corp: ZPS017-075963, Model number: 237465. They were stuck on the settings screen and couldn't get it to go into play mode despite trying soft and hard resets multiple times. The solution lies in completing the odds change steps from the beginning and working through them until the end. This will ensure that all settings are correctly changed, allowing the machine to exit settings mode and enter play mode. Here's a step-by-step guide to help you troubleshoot: 1. Ensure the machine is in idle mode with no tokens or credits being played. 2. Locate the internal toggle switch (red tipped or silver with on/off tabs) or insert key into internal key switch (if your machine came with 2 keys). 3. Machine must be turned OFF. 4. Turn key clockwise or flip reset toggle switch to the "ON" or "ODDS" position. 5. Turn main power switch ON to access programming mode. 6. A number from 1 to 6 will be displayed on the CREDIT meter on the front door or on a display inside the door. 7. Locate the reset button, usually found on the power supply. 8. Depress the button and notice movement of number being displayed on the credit meter. 9. Once the desired level is displayed (1 to 6), pull "spin reels" handle (black or red knob on front door) down to lock odds level into machine memory. 10. Turn key switch back or flip toggle to "OFF" or "PLAY" position. If your machine still doesn't initialize, try turning power to the OFF position, waiting 15 seconds, and then turning power switch back to ON position. Remember, a little patience and persistence can go a long way in getting your Pachislo slot machine up and running smoothly.The issue with the Pachislo slot machine staying on a menu screen and refusing to go into play mode has been a persistent problem for many users. It seems that some machines are stuck on the settings screen despite trying various reset methods. The correct procedure for resetting the odds on these machines involves locating the internal toggle switch or inserting the key into the internal key switch. I've tried these steps multiple times and nothing changes. The settings screen still isn't working, but the odds change when I press the lever. Everything seems to be correct, yet the menu stays on the screen. This happened to me with a machine that made me crazy too. One of my machines had a reset button that could be turned off and then back on again while holding down the spin knob. Maybe your machine has something similar. Try pressing both the front key and the door lock if you have one. If not, look for small switches or sensors near the front lock. I finally found the problem with my machine - a bad fuse needed to be replaced. Once I fixed that, it started working properly again. #STEP 1: Turn off the power #STEP 2: Insert the setting key into the keyhole on the power supply #STEP 3: Turn the setting key to the right until it reaches the "ON" position #STEP 4: Turn the power switch back on #STEP 5: Check that the credit counter displays a value between 1 and 6 #STEP 6: Press the button next to the credit counter to set the odds rate #STEP 7: Set the payout level #STEP 8: Pull down the spin knob #STEP 9: Turn the key back to the "OFF" position