

ASCENDOR STAIR LIFT

The Ascendor stair lift can be installed onto a straight or curved staircase. The inclined platform stairlift is safe and very simple to operate. Ideally suited to most external or internal environments and with fully automatic barrier arms and a platform that folds to a low profile when not in use, the Ascendor wheelchair platform lift allows other stair users to pass with ease.

SPACE SAVING DESIGN

A compact design is one of our guiding principles. The slim form of our lifts combined with a folding platform ensures your staircase remains free of obstructions.

PRACTICAL HANDRAIL

The lift is guided along two parallel rails by a set of rollers, whereby only the lower rail, equipped with teeth is intended for the rack and pinion drive. This allows unimpeded access to the upper rail, which can be put to good use as a handrail.

COMFORTABLE OPERATION

The smooth start and stop performance ensure that travel is a pleasant experience; our lifts are low-maintenance and their reliability has been proven in everyday life. The operation of the lift is completely battery-operated; the batteries are recharged at the final stations. The lift will automatically switch off after a period of time without use in order to prevent a deep discharge occurring if it has not been properly parked.


The modern touch sensitive membrane controls ensure that even people with reduced physical abilities and motor skills can operate our lifts.



PRODUCT HIGHLIGHTS

- 1. Safety bars: your well-being is our top priority
- 2. Coloured LED lighting: to further, improve integration into your building
- Graphic display: keeps you fully informed regarding the actual operational status
- 4. Simple, straightforward operation thanks to sensitive membrane button controls.
- The electrically operated folding platform provides maximum comfort with a minimum of obstruction.
- Platform underside: can be freely customised with individual colours and designs or company logos and corporate identity.

7





The integrated handrail blends harmoniously into the lift and has allowed us to produce a particularly slim design.



Choose a colour for the indirect, wraparound LED lighting, improves the individual adaptation into existing surroundings.




The graphic display panel will keep you up-to-date regarding the operating status of your lift and gives practical information and advice.

INDIVIDUAL PLATFORM CUSTOMISATION

Select one of our design options or present us with your very own personal design, thereby transforming your lift into a work of art, which can blend harmoniously into its surroundings.

Make your platform lift an extension of your own individuality.



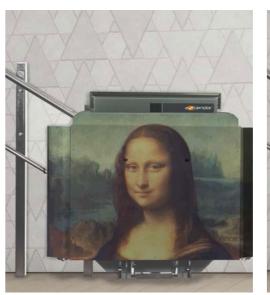





PAGE 8

ACCESSORIES, CHOICES, OPTIONS



LOCKABLE, SECURE WALL MOUNTED REMOTE CONTROL

Ideal for outdoor installations or for With a push of the button you can use in public buildings.



PORTABLE HANDHELD REMOTE CONTROL

summon the lift to the desired landing.



SELECTION OF FINISHES

With a push of the button you can summon the lift to the desired landing.



OPTIONAL FOLDING SEAT

Will transform your platform lift into a chairlift - particularly useful for people with restricted mobility.

INSTALLATION EXAMPLES

PLATFORM LIFTS FOR STRAIGHT AND CURVED STAIRCASES

Intermediate landings can be surmounted with a curved travel rail (Fig. 1) or by installing rails with elevation changes (Fig. 2). The travel rails can be mounted directly onto the walls or attached to steel stanchions (Fig. 2 & 3). Multi-level landings with parking places can be planned to suit individual requirements.



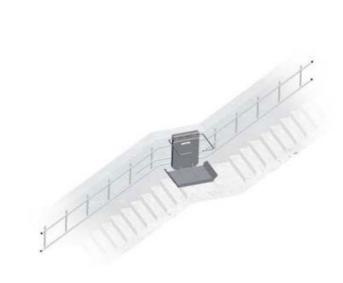




FIG. 1 FIG. 2 FIG. 3

PAGE 10 PAGE 11



PSEMIES

BOOK A NO OBLIGATION CONSULTATION

Start a conversation with Premier today, we will asses your requirements, talk through our available options and ensure we meet your lift solution needs.



0203 355 0523 - London

0161 820 3716 - Manchester



info@premierliftgroup.co.uk



www.premierliftgroup.co.uk