
Blanc

Full Ceramic Disposable



100% HTE Compatible

Built with CCELL EVO, our all-new heating technology, Blanc is capable of bringing out the distinctive aromas and rich flavor profiles of high terpene extracts, allowing for a memorable, true-to-plant experience with every inhale.

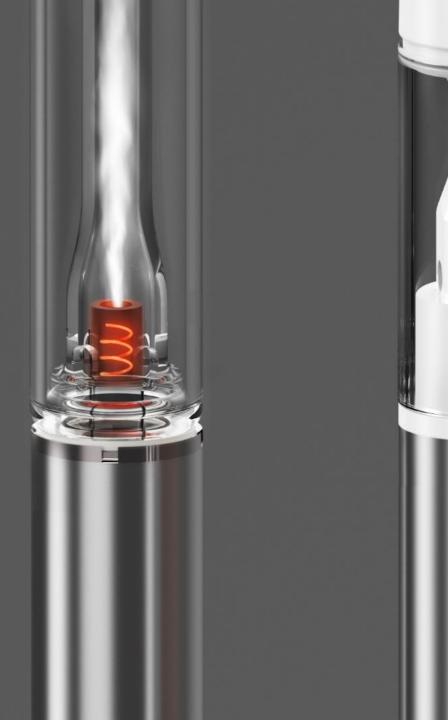

CCELL®





Sleek Design

Blanc is not your typical ceramic vape - it is designed both for functionality and beauty, using a proprietary ceramic formula that allows the product to be both sturdy and sleek.

This metal-bodied disposable vape presents a modern, stylish look that emphasizes the beauty of the ceramic contained within.

Easy Capping

With 60% less force required, the snap-fit design makes batch capping a breeze.







Every DropCounts

Blanc has a rechargeable*, micro-USB compatible battery that allows users to vape with peace of mind knowing every drop of oil is atomized perfectly.


*Blanc is rechargeable up to 10 times.





Elevate your customers' vaping experience with our state-of-the-art full ceramic cartridge.

Thanks to its ceramic center post and mouthpiece, Blanc provides cleaner, purer flavors, with the highest level of consumer safety possible.

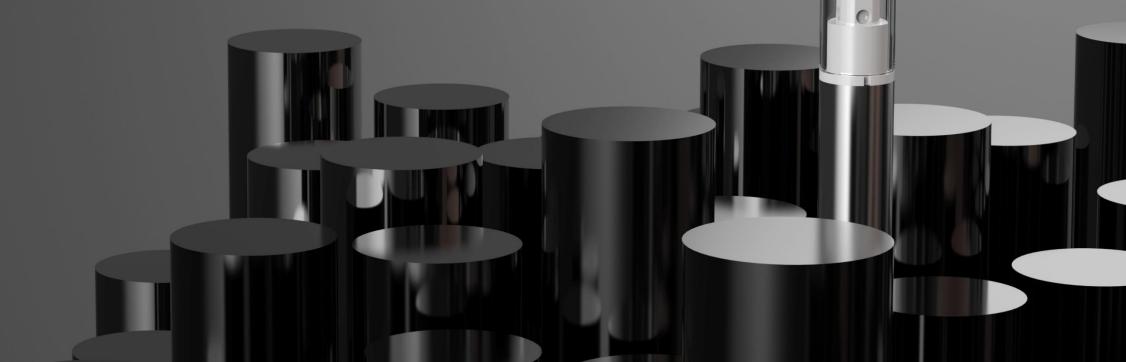

Specs


CCELL®

- Tank Volume: 0.3ml/ 0.5ml/ 1ml
- Battery Capacity: 190mAh
- Dimensions:

 φ 0.42 x 4.27/4.62/4.93 (in) / φ 10.6 x 108.4/117.4/125.23 (mm)


- Snap-fit mouthpiece
- LED charging and inhalation indicator
- · Inhale activated
- Micro-USB charging
- Available for customization
- Materials:
- Mouthpiece: Aluminum ceramic
- Center Post: Zirconia ceramic
- Oil Tank: Glass
- Body: Metal
- Color: Silver



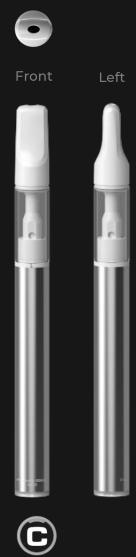

OEM Capabilities



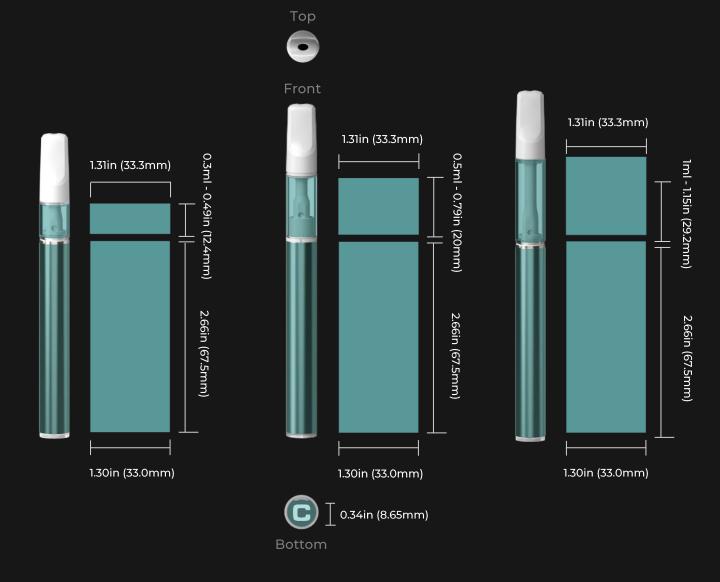

Oil Tank

OEM Option: Silkscreen printing

OEM Dimensions:

 $0.49/0.79/1.15H \times 1.31W (in) / 12.4/20/29.2H \times 33.3W (mm)$

Battery Case

OEM Options: Coating, electroplating,

silkscreen printing, laser engraving, print wrap

OEM Dimensions:

 $2.66H \times 1.30W (in) / 67.5H \times 33.0W (mm)$

Silicone Stopper

OEM Options: Custom colors, silkscreen printing

Filling and Assembly Instructions





STEP 1

Place the preloaded battery tray onto the baseboard.



STEP 4

Place the preloaded mouthpiece tray onto the deflector.



STEP 2

Place the deflector over the tray.




STEP 5

Place the gland plate on top.



STEP 3

Fill oil into the devices' reservoirs.

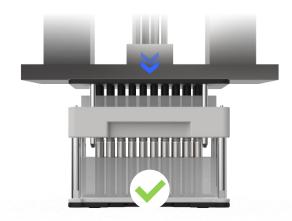

STEP 6

Press with machine to seal off the filled devices.

Blanc

Full Ceramic Disposable



FOLLOW US @CCELLOFFICIAL







