



DATA SHEET: 12

ELECTRONIC

EAR TAG FITTING

Fitting TIRIS/Allflex Electronic Ear Tags




*To ensure consistent, reliable reads, the ear tags **MUST** be fitted to the cow's **LEFT** ear.*




Current models of the applicator have a plastic adaptor fitted to the jaw slot. This **MUST** be removed prior to fitting TIRIS standard ear tags.



Press the tab on the Tag Clip fitted to the lower jaw of the Applicator so that the 'jaws' open. Slide the Electronic Tag, flat face uppermost beneath the Tag Clip as far as it will travel. Release the Tag Clip. The Electronic Tag should be firmly held in place.

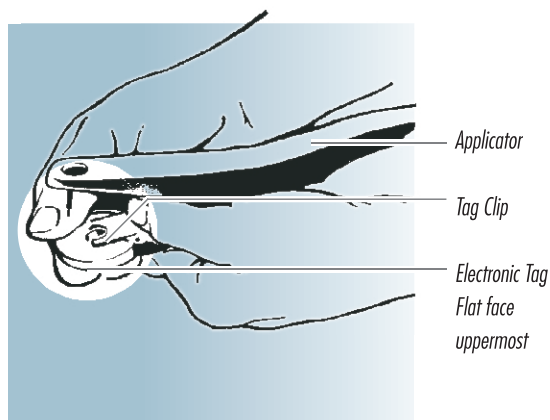

Slide the Tag Retainer (Back plate) over the pin fitted to the upper jaw of the Applicator. The stem of the Tag Retainer must be pointing toward the Electronic Tag. Check that the Tag Retainer is firmly seated.

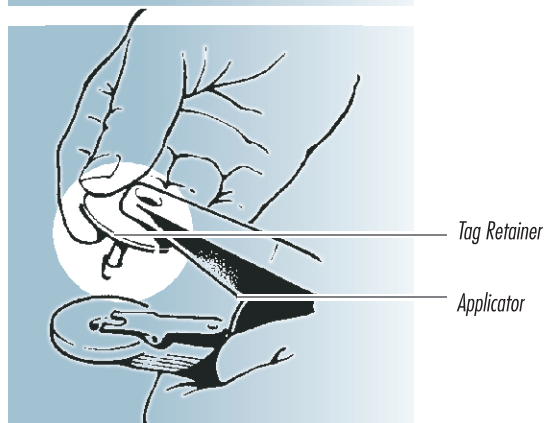

Position the Applicator around the cow's ear with the Electronic Tag centrally placed and facing forward. The Tag Retainer will be at the rear of the ear. Squeeze the Applicator firmly and consistently until the Tag Retainer stem pierces the ear and locates into the hole in the Electronic Tag. Maintain pressure on the Applicator until sure that the Retainer Stem has locked into the Electronic Tag. Release the Applicator and check the Tag for security.

