




## RSS TRANSMITTER

### PV Shutdown Activator for TS4-F

The Tigo RSS Transmitter is part of a module-level shutdown solution when paired with Tigo TS4-F. While powered on, the RSS Transmitter sends a power line communication (PLC) signal to the TS4-F units to keep their PV modules connected and supplying energy.

TS4-F units automatically enter shutdown mode when the RSS Transmitter is switched off and resume energy production when power is restored to the RSS Transmitter.

The RSS Transmitter includes one or two RSS Cores, and a 120/240V<sub>AC</sub> power supply is available separately.

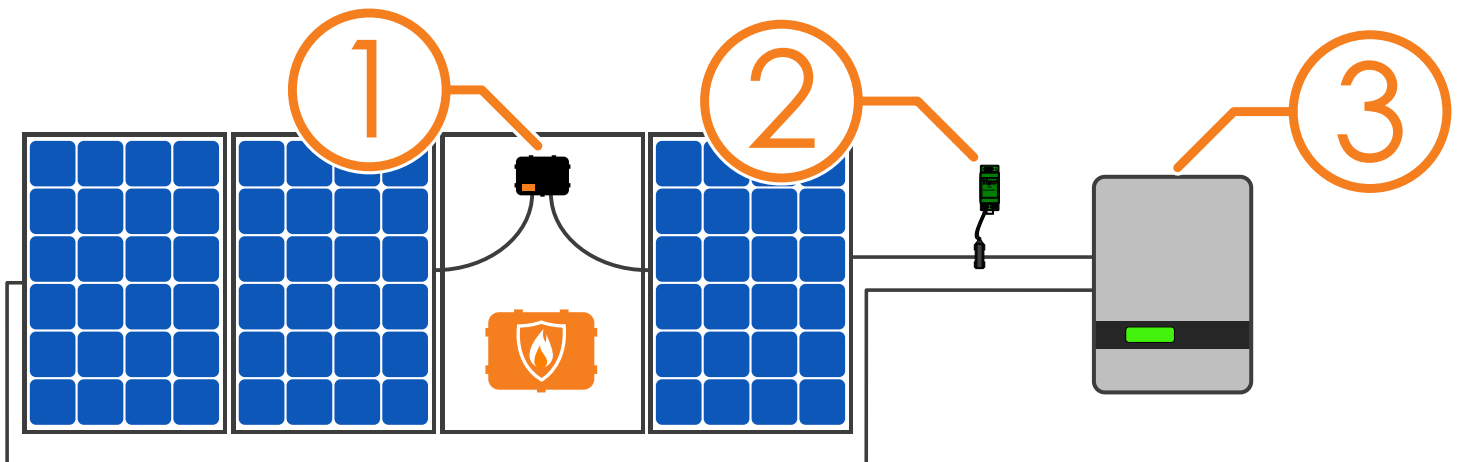

1. Modules equipped with Tigo TS4-F
2. Tigo RSS Transmitter and RSS Core
3. Inverter

# RSS TRANSMITTER

Meets NEC 690.12 requirements

Module-level deactivation with TS4-F


Automatic or manual shutdown

Includes one or two RSS Cores


Optional 120/240V<sub>AC</sub> power supply



RSS Transmitter - Front View

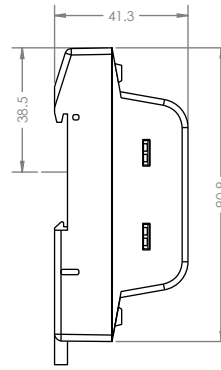

RSS Transmitter - Side View

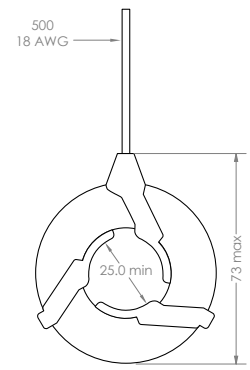

RSS Core - Side View

All dimensions in mm.

## Input

Transmitter Input Voltage: 12V<sub>DC</sub> (+/- 2%)

Transmitter Input Current: 1A

## RSS Core

Max Current: 150A per RSS Core (Single Core: 150A, Dual Core: 300A)

Max String Voltage: 1500V<sub>DC</sub>

Max Number of Strings per Core: 10


Max Supported PV Modules per String: 30

## Environmental

Operating Temperature Range: -40°C to 85°C (PCBA)

For Tigo RSS Transmitter integration inside an inverter, be able to provide the following power profile:

- Voltage: 12V<sub>DC</sub> (+/- 2%)
- Power Average: 0.85W
- Power Standby: 0.06W
- Duty Cycle: 15%
- Max Power: 5.5W

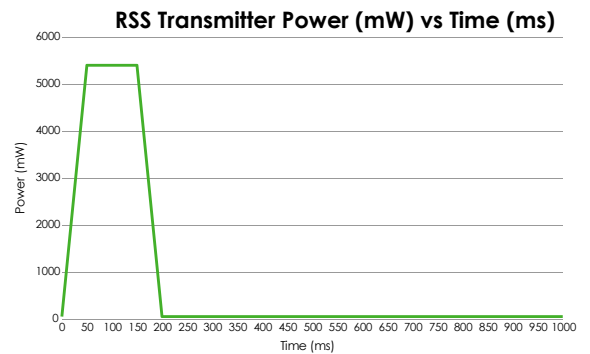

## ORDERING OPTIONS

490-00000-10 Single Core (150A) RSS DIN Rail Transmitter (no power supply)

490-00000-20 Dual Core (300A) RSS DIN Rail Transmitter (no power supply)


983-01512-00 DIN Rail Power Supply, 12V<sub>DC</sub>, 1.25A

### For sales info:

sales@tigoenergy.com or 1.408.402.0802

### For technical information:

<http://support.tigoenergy.com>



### For product info:

Visit [www.tigoenergy.com/products](http://www.tigoenergy.com/products)

### For technical info:

<http://support.tigoenergy.com>

For additional info and product selection assistance, use Tigo's online design tool at [www.tigoenergy.com/design](http://www.tigoenergy.com/design)

