
# OMNTEC L2PD4

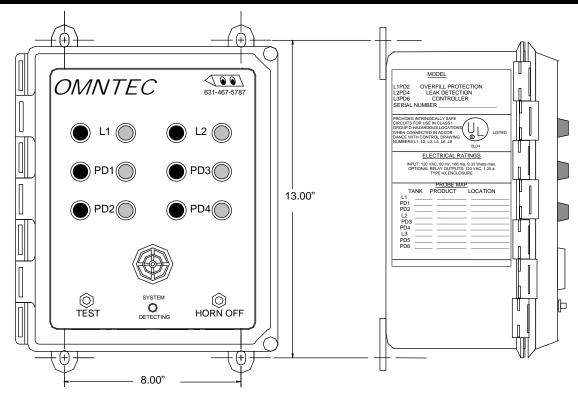

#### **SPECIFICATIONS**

#### **POWER INPUT**

85-125 VAC, 47-440 Hz 16 Watts maximum

### **POWER TO SENSORS**

2 VDC @ 13 mA

# **RELAY OUTPUT**

SPST normally open dry contacts 0.5 AMPS, 120 AC switches when an alarm condition occurs

WEIGHT DIF

**DIMENSIONS** 

8.75 LBS.

(W) 10.875" x (H) 12.25"

#### **SENSOR CABLE**

Shielded 22 AWG UL-E118830 CM Maximum length 2000 feet

# **ENCLOSURE**

**OPERATING TEMPERATURE** 

NEMA 4X -40° to 140° F

### **UL LISTED**

Intrinsically safe circuits for use in class I group D hazardous locations when connected in accordance with control drawings L2PD4

## **AUDIO/VISUAL CONSOLE**

AUDIBLE ALARM - 95 dB pulsing horn with 30 second timeout

**RED LIGHT** -Indicates either liquid alarm for L-series sensor or product alarm for PD-series sensor

**AMBER LIGHT** – indicates either lo level for L-2 series sensor or water alarm for PD-series sensor

**TEST BUTTON-** When pressed will actually test entire system electronics from control panel to sensors **GREEN LIGHT-** indicates the power is on

HORN OFF BUTTON - Silences the audible alarm when pressed

# **SENSORS**

L-1 High level optic sensor

L-2 Dual level high/low liquid optic sensor PD-series Product distinguishing liquid optic sensor

L-R-1 Reservoir sensor

# **ACCESSORIES**

RA-1 Audio/visual remote annunciator

RLY-RA Relay (consult factory)

RA-1-NYS Remote annunciator with strobe (consult factory)

#### **LABELS**

Provided with controller

# **LPD-series Installation Instructions**


READ ALL INSTRUCTIONS PRIOR TO SYSTEM INSTALLATION. ALL WIRING IS TO BE DONE IN ACCORDANCE WITH ALL NATIONAL AND LOCAL ELECTRICAL CODES. POWER IS TO BE OFF DURING ANY WIRING. WIRE AND TEST ENTIRE SYSTEM BEFORE UTILIZING SK-3 CONNECTOR SEALING KITS. STANDARD EQUIPMENT IS COMPATIBLE WITH MOST PETROLEUM PRODUCTS. SOME CHEMICAL AND SOLVENTS REQUIRE SPECIFIC MATERIALS OF CONSTRUCTION. IF UNSURE OF COMPATIBLE CONTACT MANUFACTURER.

# 1. L-SERIES SENSOR

# L-1 SENSOR

The L-1 sensor (see pg.8) is primarily used to detect a liquid level inside the tank. The sensor detects a single liquid level and is typically used for overfill protection at 90% tank capacity. Standard sensor part numbers are L-1-S (12"), L-1-L (20"), L-1-D (custom length).

The L-1 sensor is installed into the tank via the 2" bushing which is an integral part of the sensor. This sensor screws directly into a 2" female threaded NPT (use a reducer bushing if necessary).

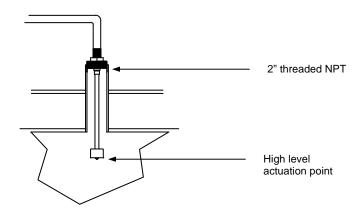


Connection of the sensor to the control unit cable is made in a junction box. For detailed wiring scheme refer to appropriate drawing (see pg.6 and 17). These connections must be made using supplied SK-3 connector sealing kit.

# PDS SENSOR

The PDS sensor (See pg.7) is designed to detect liquid in sumps or containment areas.


To install the PDS sensor as an above ground sump sensor mount a junction box between 2 and 3 feet above bottom of containment area. Attach sensor to junction box via conduit or cable clamp, leaving a ¼" clearance between the sensor end and the bottom of the containment area. For detailed wiring scheme refer to appropriate drawing (see pg.6 and 17). Connect sensor cables to control unit cables in junction box using supplied SK-3 connector sealing kit.

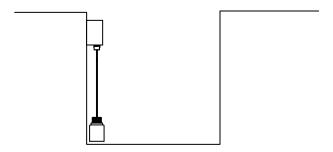


# PDW-\* SENSOR

PDW-\* sensor (see pg.9) is designed to detect liquid and differentiate water from hydrocarbons in the interstitial space of a double wall tank. The PDWF-\* sensor is designed for fiberglass tanks and the PDWS sensor is designed for steel tanks.

1. The PDWF-\* sensor is installed through the interstitial port. If the tank is pitched, locate the interstitial sensor at lowest elevation of tank. Insert sensor into the interstitial port and push down around outside of inner tank. When PVC handle contacts the inner tank the sensor should be located at the bottom of interstitial space. Reduce the riser to 3/4" NPT and install the supplied oiltight fitting. The oiltight fitting must be installed to prevent liquids from entering the interstitial space. Run conduit from interstitial man hole to the central junction box, located in the manway. Install a second oiltight on the sensor cable and pull sensor cable through conduit. Connect oiltight to conduit and tighten. For detailed wiring scheme refer to appropriate control drawing (see pg.6 and 17). Connect sensor wires in central junction box to control unit cable(s) and use SK-3 connector sealing kit.

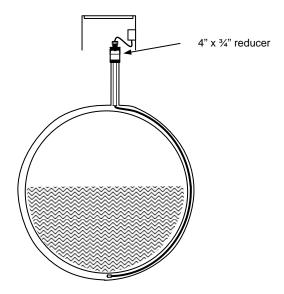

2. To install the PDWS as a doublewall steel tank sensor remove the oiltight from the sensor cable. Feed the cable through the appropriate bushing required to adapt the interstitial port to 3/4" NPT (oiltight). Feed wires through oiltight, leaving it loose. Gently lower sensor down interstitial port until it rests on the bottom. Install oiltight into the bushing. Pull sensor up by the cable until it just comes off the bottom. Maintain this position and tighten the oiltight fitting. This is required to seal the interstitial port. All connections are made using the supplied SK-3 connector kit

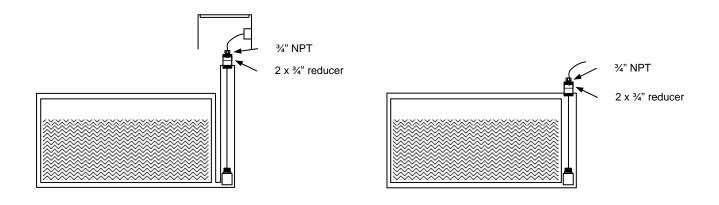

# 2. CONTROL UNIT

The control unit (see pg.1) should be mounted in a manned area. Route sensor control cable through conduit from the junction box to the control unit. Sensor control cables enter the control unit through the output port only. The cables are wired as shown in the appropriate drawing (see pg.6). The control unit accepts any possible combination of L-series sensors.

## INPUT POWER HOOKUP

Input power requirements are: 85 – 125 VAC 16 Watts max 47 – 440 Hz

Input power cable should be wired in accordance with all pertinent electrical codes. This cable should enter the control unit through the input power port only. The power is hooked up to the power supply and wired as per control drawing (see page 17). NOTE: EARTH GROUND TERMINAL MUST BE CONNECTED.


#### REMOTE ANNUNCIATOR OPTION

Mount remote annunciator (see pg. 16) within audio / visual range of the filling operator. NOTE: the remote must be outside of the HAZARDOUS AREA. Pull appropriate low voltage wire from the remote to the control unit. See appropriate drawing for wiring details. Run wires through output port. Connect color coded nuts.

SK-3 CONNECTOR SEALING KIT


Make all splices using SK-3 connector kit (supplied)


# L2PD4 CONTROLLER CONNECTION DIAGRAM

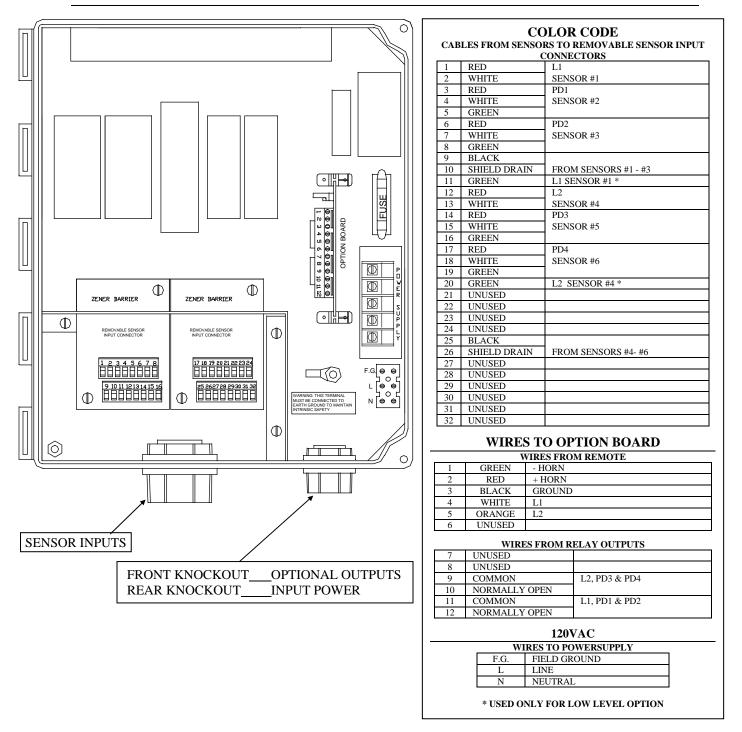

NOTE: To maintain proper shielding, <u>BLACK sensor wires</u> and SHIELD DRAINS should **not** be connected together at sensors.

# Product distinguishing Optic Sensor

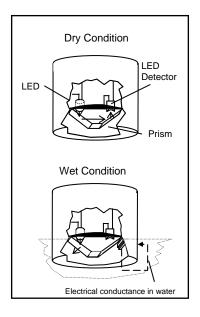

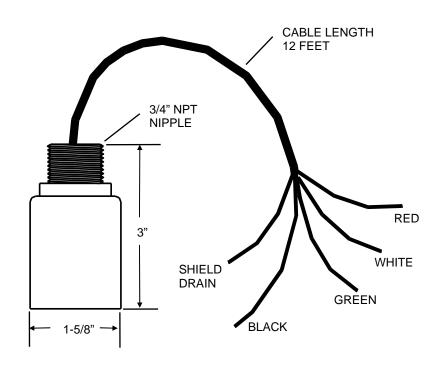

# **PDS SPECIFICATIONS**

#### U.L. LISTED 5L04

Intrinsically safe Class I, Group D Hazardous Locations when connected in accordance with control drawing nos. L1PD2, L2PD4, L3PD6

# **OPERATING TEMPERATURE**

-40° TO +140° F

#### **POWER**

2 VDC @ 13 mA

# **WEIGHT**

1/2 pound

# **PRINCIPLES OF OPERATION**

LIQUIDS (ex: fuel, water) – photo Optic DRY CONDITION – Normally closed light beam ALARM CONDITION – Opens (refracts) normally closed light beam WATER DETECTION - conductance


#### **SENSOR CABLE**


Shielded 22 AWG UL-E118830 CM Maximum length 2000 feet

# **RESPONSE TIME**

*OMNTEC* PDWF

# Product distinguishing Steel Tank Dry Interstitial Sensor

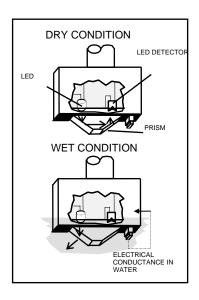

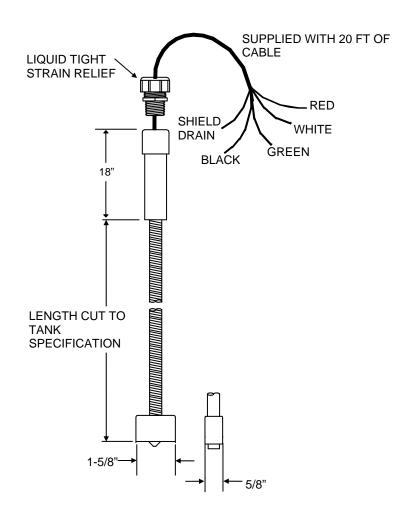

#### **PDWF SPECIFICATIONS**

# U.L. LISTED 5L04

Intrinsically safe Class I, Group D Hazardous Locations when connected in accordance with control drawing nos. L1PD2, L2PD4, L3PD6

#### **OPERATING TEMPERATURE**

-40° TO +140° F

#### **POWER**

2 VDC @ 13 mA

#### **WEIGHT**

1/2 pound

# **PRINCIPLES OF OPERATION**

LIQUIDS (ex: fuel, water) – photo Optic DRY CONDITION – Normally closed light beam ALARM CONDITION – Opens (refracts) normally closed light beam WATER DETECTION - conductance


### **SENSOR CABLE**


Shielded 22 AWG UL-E118830 CM Maximum length 2000 feet

# **RESPONSE TIME**

*OMNTEC* PDWS

# Product distinguishing Steel Tank Dry Interstitial Sensor

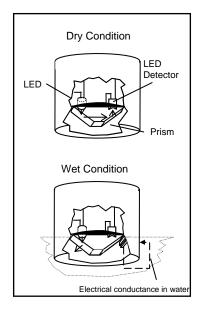

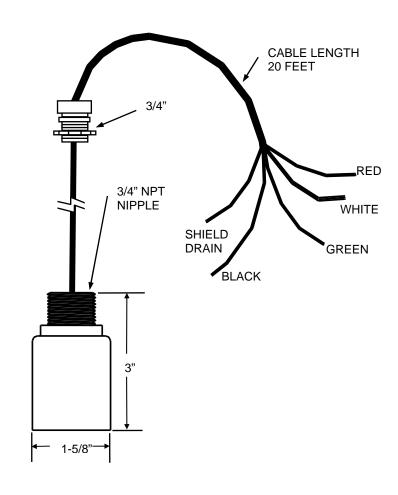

# **PDWS SPECIFICATIONS**

# U.L. LISTED 5L04

Intrinsically safe Class I, Group D Hazardous Locations when connected in accordance with control drawing nos. L1PD2, L2PD4, L3PD6

#### **OPERATING TEMPERATURE**

-40° TO +140° F

#### **POWER**

2 VDC @ 13 mA

#### **WEIGHT**

1/2 pound

# **PRINCIPLES OF OPERATION**

LIQUIDS (ex: fuel, water) – photo Optic DRY CONDITION – Normally closed light beam ALARM CONDITION – Opens (refracts) normally closed light beam WATER DETECTION - conductance


### **SENSOR CABLE**


Shielded 22 AWG UL-E118830 CM Maximum length 2000 feet

# **RESPONSE TIME**

# Liquid Level Optic Sensor

# **Principles of Operation**

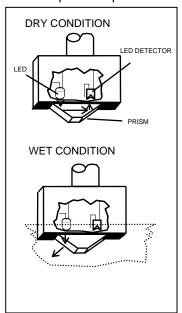

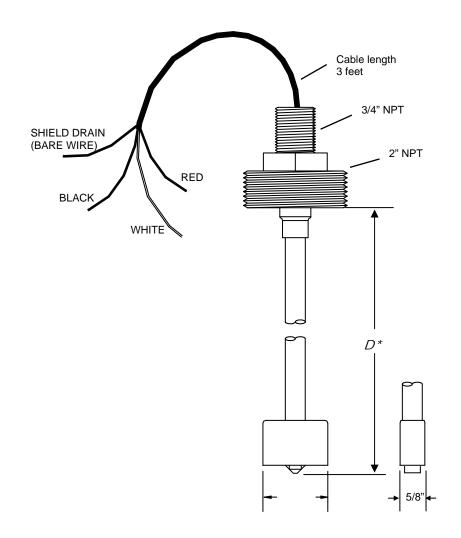

#### **L-1 SPECIFICATIONS**

### U.L. LISTED 5L04

Intrinsically safe Class I, Group D Hazardous Locations when connected in accordance with Control Drawing nos. L1, L2, L3, L4, L6, L9

# **OPERATING TEMPERATURE**

-40 TO +140 F

# **POWER**

2 VDC @ 13 mA

# **WEIGHT**

2 pounds

# **PRINCIPLES OF OPERATION**

LIQUIDS (ex: fuel, water) – Photo Optic DRY CONDITION – Normally closed light beam ALARM CONDITION – Opens (refracts) normally closed light beam


# **SENSOR CABLE**

Shielded 22 AWG UL-E118830 CM Maximum length 2000 feet

# **RESPONSE TIME**

OMNTEC L-2

# Dual Level Liquid Optic Sensor for High and Caution Level

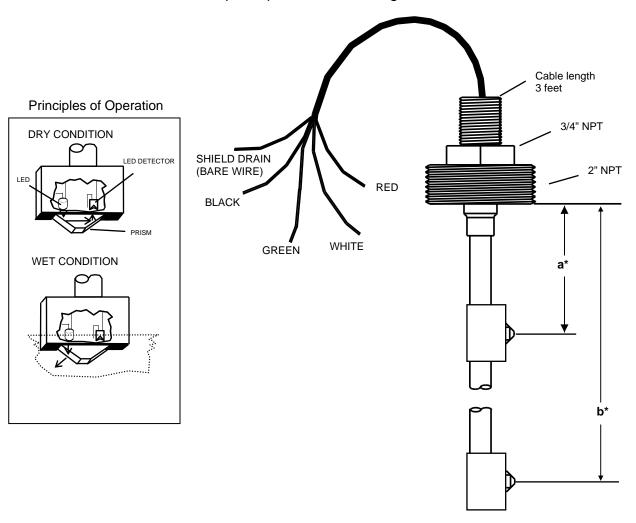

### L-2 SPECIFICATIONS

# U.L. LISTED 5L04

Intrinsically safe Class I, Group D Hazardous Locations when connected in accordance with Control Drawing nos. L1, L2, L3, L4, L6, L9

# **OPERATING TEMPERATURE**

-40 TO +140 F

#### **POWER**

2 VDC @ 13 mA

### **WEIGHT**

2 pounds

# **PRINCIPLES OF OPERATION**

LIQUIDS (ex: fuel, water) – Photo Optic
DRY CONDITION – Normally closed light beam
ALARM CONDITION – Opens (refracts) normally closed light beam


# **SENSOR CABLE**

Shielded 22 AWG UL-E118830 CM Maximum length 2000 feet

#### **RESPONSE TIME**

**OMNTEC** 

# RESERVOIR SENSOR

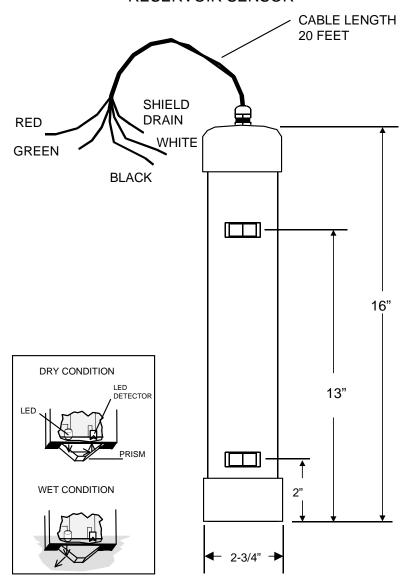

# **L-R-1 SPECIFICATIONS**

SOLID STATE (NO MOVING PARTS)

# **OPERATING TEMPERATURE**

-40 TO +140 F

# **POWER**

2 VDC @ 13 mA

# **WEIGHT**

2 pounds

# **RESPONSE TIME**

**Immediate** 

PRINCIPLES OF OPERATION
LIQUIDS (ex: fuel, water) – Photo Optic

DRY CONDITION -

High level: Normally closed light beam Low Level: Normally open light beam

ALARM CONDITION -


Hi level: Opens (refracts) normally closed light beam Low level: Closes normally open light beam

# **SENSOR CABLE**

Shielded 22 AWG UL-E118830 CM Maximum length 2000 feet

OMNTEC L-R-1

# TYPICAL RESERVOIR SENSOR INSTALLATION

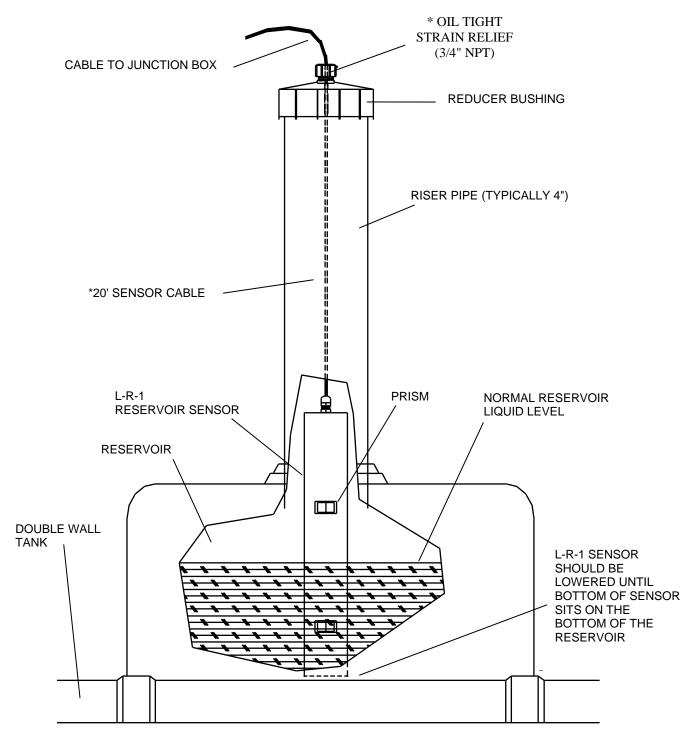


\*SUPPLIED BY OMNTEC MFG., INC.


# **OMNTEC LPD-Series System Operation and Test Instructions**


- 1. On the front panel the Green "SYSTEM DETECTING" light should be on indicating that system is up and running
- 2. If sensors are not in alarm, all Red and Amber lights should be off (see figure 1)
  - Optical sensors are solid state and use a normally closed light loop in a prism for sensing. When liquid is present at sensor, the normally closed loop opens, thus sending an alarm signal back to the alarm panel. The panel responds by turning on the appropriate light and sounding an audible alarm (see figure 2). The audible alarm will signal for 30 seconds. The visual alarm will remain on until alarm condition is cleared.
  - PD-series sensors contain a conductivity electrode that will send an alarm upon presence of water. In the unlikely event that the conductivity electrode does not detect water, the sensor will send a liquid alarm signal to the controller as described in 2a.
- 3. Sensors can be tested as follows:
  - Since sensors work with normally closed loop of light be sure sensor is not exposed to light source of any kind
  - Hit the test button on alarm panel and observe panel lights (see figure 3)
  - If all lights illuminate and audible alarm sounds, system test is complete
  - When test button is hit a signal is sent to sensor to turn its prism light off.
     What this does is put the sensor into a true alarm condition
  - The sensor then responds as explained in part (2)
  - Pressing Horn OFF button will silence audible alarm
  - The conductivity portion of the sensor can be tested by submerging the sensor in water
- 4. System should be tested on at least a weekly basis
- 5. Every alarm, malfunction and test result should be recorded in a dated signed log

**Note:** If a reservoir or high/low sensor is being used follow same procedures as above to test its high level portion. To test low level sensor, it must either be lifted out of liquid, or liquid level must be lowered below sensor




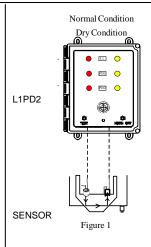

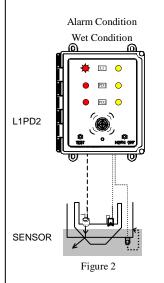

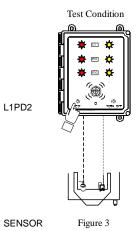

# **L2PD4 Control Drawing**

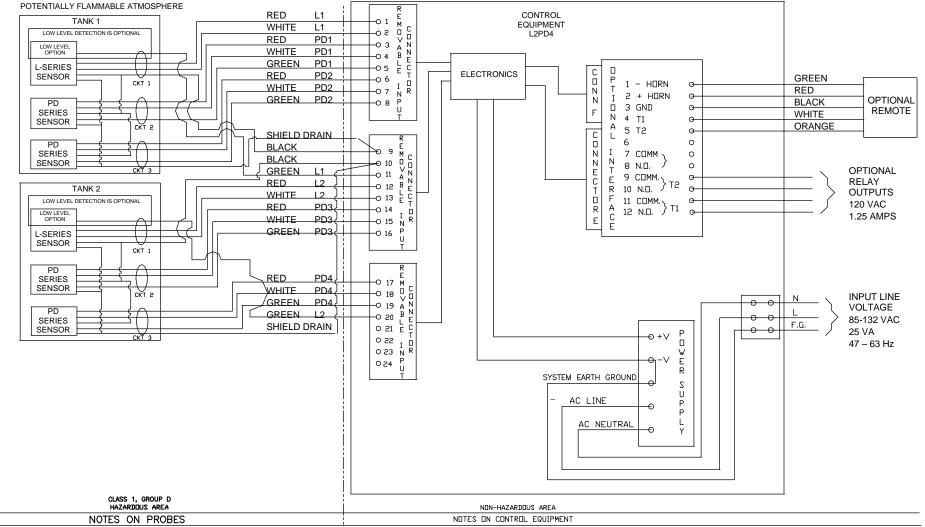

- LOOP ALL SENSOR GROUNDS (BLACK WIRES) FOR EACH TANK.
   LOOP ALL SENSOR SHIELD DRAINS (BARE WIRES) AT EACH TANK.
- LOW LEVEL DETECTION IS OPTIONAL. WHEN SPÉCIFIED, IT IS AN INTEGRAL PART OF THE HIGH LEVEL SENSOR. THE GREEN WIRE OF CIRCUIT 1 IS UTILIZED ONLY WHEN LOW LEVEL DETECTION IS PRESENT.
- THE INTRISICALLY SAFE FIELD WIRING SHALL BE INSTALLED IN ACCORDANCE WITH ARTICLE 504 IN THE NATIONAL ELECTRICAL CODE ANSI/NFPA 70.
- ALL SENSORS ARE ELECTRONICALLY IDENTICAL AND MAY BE INTERCHANGED ALLOWING SYSTEM FLEXIBILTY.
- SENSOR TO CONTROL UNIT CABLE WILL BE TWO PAIR OF #22 AWG WITH SHIELD AND DRAIN PVC JACKETED UL-118830 CM. CABLE LENGTH WILL BE LIMITED TO 2000 FEET MAXIMUM.


- 1. ALL WIRING MUST MEET LOCAL AND NATIONAL ELECTRICAL CODES.
- 2. SYSTEM EARTH GROUND MUST BE CONNECTED TO TERMINAL F.G. TO INSURE INTRINSIC SAFETY AND MUST BE LESS THAN 1  $\Omega$  WITH RESPECT TO EARTH GROUND.
- OPTIONAL REMOTE REQUIRES #22 AWG LOW VOLTAGE COMMUNICATION CABLE MINIMUM.

# **RA-Series Remote High Level Alarm**


RA-1



RA-2

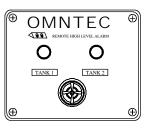


RA-3

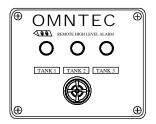



RA-4




# **Internal Wiring Color Code**

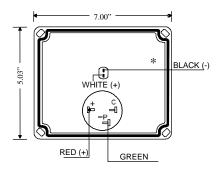

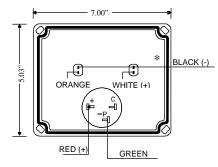

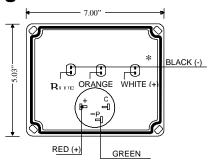

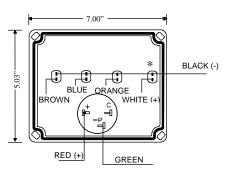

\* WARNING LABEL PLACED HERE: Warning: Low voltage inputs only

#### **SPECIFICATIONS**


95 dB pulsing horn Audible Alarm Red Light Liquid-high-level alarm Response Time Immediate


12VDC @200mA maximum Power Input

from controller

22 AWG minimum Wire

Weight 1 lb.

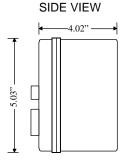

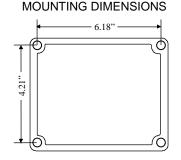

Note: It is recommended that knockouts be placed in the bottom of the enclosure

# **LOG SHEET**

DATE	NAME	SYSTEM STATUS	SIGNATURE

# WARRANTY

The seller OMNTEC Mfg., Inc. warrants to buyer defects when properly installed, and maintained by user. The sellers sole obligation is to repair or replace parts found to be defective, or non-conforming for one year and only after evaluation by factory. The liability of the seller shall not exceed the price paid for the components found to be defective. The above warranty is exclusive of all other warrantees whether implied or expressed. Seller assumes no obligation for special or, indirect damages incurred by user.

All standard tank gauging systems are free of defects when properly installed and maintained by user. Warranty on tank gauging systems will only be effective after proper documentation has been submitted by the buyer to OMNTEC Mfg., Inc. The sellers sole obligation is to repair or replace parts found to be defective, or non-conforming for one year and only after evaluation by factory. The liability of the seller shall not exceed the price paid for the components found to be defective. The above warranty is exclusive of all other warrantees whether implied or expressed. Seller assumes no obligation for special or indirect damages incurred by user.

All standard replacement parts, "add-ons", or spare parts are free of defects when properly installed and maintained by user. The sellers sole obligation is to repair or replace parts found to be defective or non-conforming for 90 days and only after evaluation by factory. The liability of the seller shall not exceed the price paid for the components found to be defective. The above warranty is exclusive of all other warrantees whether implied or expressed. Seller assumes no obligation for special or indirect damages incurred by user.

Equipment not covered by this warranty includes, but is not limited to: custom equipment, pressure transducers, and control systems.