

EM05 Hardware Design

LTE Module Series

Rev. EM05_Hardware_Design_V1.0

Date: 2017-09-22



Our aim is to provide customers with timely and comprehensive service. For any assistance, please contact our company headquarters:

Quectel Wireless Solutions Co., Ltd.

7th Floor, Hongye Building, No.1801 Hongmei Road, Xuhui District, Shanghai 200233, China

Tel: +86 21 5108 6236 Email: info@quectel.com

Or our local office. For more information, please visit:

http://quectel.com/support/sales.htm

For technical support, or to report documentation errors, please visit:

http://quectel.com/support/technical.htm

Or Email to: support@quectel.com

GENERAL NOTES

QUECTEL OFFERS THE INFORMATION AS A SERVICE TO ITS CUSTOMERS. THE INFORMATION PROVIDED IS BASED UPON CUSTOMERS' REQUIREMENTS. QUECTEL MAKES EVERY EFFORT TO ENSURE THE QUALITY OF THE INFORMATION IT MAKES AVAILABLE. QUECTEL DOES NOT MAKE ANY WARRANTY AS TO THE INFORMATION CONTAINED HEREIN, AND DOES NOT ACCEPT ANY LIABILITY FOR ANY INJURY, LOSS OR DAMAGE OF ANY KIND INCURRED BY USE OF OR RELIANCE UPON THE INFORMATION. ALL INFORMATION SUPPLIED HEREIN IS SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

COPYRIGHT

THE INFORMATION CONTAINED HERE IS PROPRIETARY TECHNICAL INFORMATION OF QUECTEL WIRELESS SOLUTIONS CO., LTD. TRANSMITTING, REPRODUCTION, DISSEMINATION AND EDITING OF THIS DOCUMENT AS WELL AS UTILIZATION OF THE CONTENT ARE FORBIDDEN WITHOUT PERMISSION. OFFENDERS WILL BE HELD LIABLE FOR PAYMENT OF DAMAGES. ALL RIGHTS ARE RESERVED IN THE EVENT OF A PATENT GRANT OR REGISTRATION OF A UTILITY MODEL OR DESIGN.

Copyright © Quectel Wireless Solutions Co., Ltd. 2017. All rights reserved.



About the Document

History

Revision	Date	Author	Description
1.0	2017-09-22	Yeoman CHEN/ Daryl DU	Initial



Contents

Ab	out the Document	2
Со	ontents	3
Tal	ble Index	5
	gure Index	
1	Introduction	7
	1.1. Safety Information	
2	Product Concept	
	2.1. General Description	
	2.2. Key Features	
	2.3. Functional Diagram	
3	Application Interfaces	
	3.1. Pin Assignment	
	3.2. Pin Description	
	3.3. Operating Modes	
	3.4. Power Saving	
	3.4.1. Sleep Mode	
	3.4.1.1. USB Application with USB Remote Wakeup Function	
	3.4.1.2. USB Application with USB Suspend/Resume and WOWWAN# Functions	
	3.4.2. Airplane Mode	
	3.5. Power Supply	
	3.5.1. Decrease Voltage Drop	
	3.5.2. Reference Design for Power Supply	
	3.5.3. Monitor the Power Supply	
	3.6. Turn on and off Scenarios	
	3.6.1. Turn on the Module Using the FUL_CARD_POWER_OFF#	
	3.6.2. Turn off the Module	
	3.6.2.1. Turn off the Module Using the FUL_CARD_POWER_OFF# Pin	
	3.6.2.2. Turn off the Module Using AT Command	
	3.7. Reset the Module	
	3.8. (U)SIM Interface	
	3.9. USB Interface	
	3.10. PCM and I2C Interfaces	
	<u> </u>	
	3.11.1. W_DISABLE1# Signal	
	3.11.2. LED# Signal	
	3.11.4. DPR Signal*	
	3.12. Configuration Pins	
4	GNSS Receiver	40



	4.1.	Gene	eral Description	40
5	Antei	nna Int	terfaces	41
	5.1.	Main	n/Rx-diversity Antenna Interfaces	41
	5.2.	GNS	SS Antenna Interface	42
	5.3.	Ante	nna Installation	42
	5	5.3.1.	Antenna Requirement	42
	5	5.3.2.	Recommended RF Connector for Antenna Installation	43
6	Elect	rical, R	Reliability and Radio Characteristics	46
	6.1.	Abso	olute Maximum Ratings	46
	6.2.	Powe	er Supply Requirements	46
	6.3.	I/O R	Requirements	47
	6.4.	Oper	rating Temperature	47
	6.5.	Curre	ent Consumption	48
	6.6.	RF C	Output Power	50
	6.7.	RF R	Receiving Sensitivity	51
	6.8.		Characteristics	
	6.9.	Ther	mal Consideration	52
7	Mech	anical	Dimensions and Packaging	54
	7.1.	Mech	hanical Dimensions of the Module	54
	7.2.	Stan	dard Dimensions of M.2 PCI Express	55
	7.3.	Desi	gn Effect Drawings of the Module	56
	7.4.	M.2 (Connector	57
	7.5.	Pack	kaging	57
8	Appe	ndix R	References	58



Table Index

TABLE 1: FREQUENCY BANDS OF EM05 SERIES MODULE	9
TABLE 2: KEY FEATURES OF EM05	10
TABLE 3: DEFINITION OF I/O PARAMETERS	15
TABLE 4: DESCRIPTION OF PINS	15
TABLE 5: OVERVIEW OF OPERATING MODES	19
TABLE 6: DEFINITION OF VCC AND GND PINS	22
TABLE 7: DESCRIPTION OF FUL_CARD_POWER_OFF# PIN	24
TABLE 8: RESET_N PIN DESCRIPTION	27
TABLE 9: PIN DEFINITION OF THE (U)SIM INTERFACE	29
TABLE 10: PIN DEFINITION OF USB INTERFACE	32
TABLE 11: PIN DEFINITION OF PCM AND I2C INTERFACES	34
TABLE 12: PIN DEFINITION OF CONTROL AND INDICATOR SIGNALS	
TABLE 13: FUNCTION OF THE W_DISABLE1#	
TABLE 14: RF STATUS INDICATIONS OF LED# SIGNAL	
TABLE 15: STATE OF THE WOWWAN# SIGNAL	37
TABLE 16: FUNCTION OF THE DPR SIGNAL	
TABLE 17: PIN DEFINITION OF CONFIGURATION PINS	
TABLE 18: LIST OF CONFIGURATION PINS	
TABLE 19: MODULE OPERATING FREQUENCIES	
TABLE 20: GNSS FREQUENCY	
TABLE 21: ANTENNA REQUIREMENTS	42
TABLE 22: MAJOR SPECIFICATIONS OF MM4829-2702 CONNECTOR	
TABLE 23: ABSOLUTE MAXIMUM RATINGS	46
TABLE 24: POWER SUPPLY REQUIREMENTS	
TABLE 25: I/O REQUIREMENTS	
TABLE 26: OPERATING TEMPERATURE	
TABLE 27: EM05-CE CURRENT CONSUMPTION	
TABLE 28: EM05-CML CURRENT CONSUMPTION	
TABLE 29: EM05 CONDUCTED RF OUTPUT POWER	
TABLE 30: EM05-CML CONDUCTED RF RECEIVING SENSITIVITY	
TABLE 31: EM05-CE CONDUCTED RF RECEIVING SENSITIVITY	
TABLE 32: ESD CHARACTERISTICS OF EM05	
TABLE 33: HEAT DISSIPATION PERFORMANCE	
TABLE 34: RELATED DOCUMENTS	
TABLE 35: TERMS AND ABBREVIATIONS	58



Figure Index

FIGURE 1: FUNCTIONAL DIAGRAM	
FIGURE 2: PIN ASSIGNMENT	14
FIGURE 3: SLEEP MODE APPLICATION WITH USB REMOTE WAKEUP	20
FIGURE 4: SLEEP MODE APPLICATION WITH WOWWAN#	21
FIGURE 5: POWER SUPPLY LIMITS DURING TX POWER	22
FIGURE 6: REFERENCE CIRCUIT OF VCC	23
FIGURE 7: REFERENCE DESIGN OF POWER SUPPLY	23
FIGURE 8: TURN ON THE MODULE USING GPIO	24
FIGURE 9: TURN ON THE MODULE AUTOMATICALLY	25
FIGURE 10: TIMING OF TURNING ON MODULE	25
FIGURE 11: TIMING OF TURNING OFF THE MODULE THROUGH FUL_CARD_POWER_OFF#	26
FIGURE 12: TIMING OF TURNING OFF THE MODULE THROUGH AT COMMAND	27
FIGURE 13: REFERENCE CIRCUIT OF RESET# BY USING DRIVING CIRCUIT	
FIGURE 14: REFERENCE CIRCUIT OF RESET# BY USING BUTTON	28
FIGURE 15: TIMING OF RESETTING MODULE	28
FIGURE 16: REFERENCE CIRCUIT OF NORMALLY SHORT-CIRCUITED (U)SIM CARD CONNECTOR.	30
FIGURE 17: REFERENCE CIRCUIT OF NORMALLY OPEN (U)SIM CARD CONNECTOR	30
FIGURE 18: REFERENCE CIRCUIT OF A 6-PIN (U)SIM CARD CONNECTOR	31
FIGURE 19: REFERENCE CIRCUIT OF USB INTERFACE	
FIGURE 20: PRIMARY MODE TIMING	33
FIGURE 21: AUXILIARY MODE TIMING	34
FIGURE 22: REFERENCE CIRCUIT OF PCM APPLICATION WITH AUDIO CODEC	35
FIGURE 23: LED# SIGNAL REFERENCE CIRCUIT DIAGRAM	36
FIGURE 24: WOWWAN# BEHAVIOR	37
FIGURE 25: WOWWAN# SIGNAL REFERENCE CIRCUIT DIAGRAM	38
FIGURE 26: RF ANTENNA CONNECTORS	41
FIGURE 27: DIMENSIONS OF THE MM4829-2702 CONNECTOR (UNIT: MM)	43
FIGURE 28: SPECIFICATIONS OF 0.81MM COAXIAL CABLE	44
FIGURE 29: CONNECTION BETWEEN THE RF CONNECTOR AND THE 0.81MM COAXIAL CABLE	44
FIGURE 30: CONNECTION BETWEEN THE RF CONNECTOR AND THE 1.13MM COAXIAL CABLE	45
FIGURE 31: THERMAL DISSIPATION AREA ON BOTTOM SIDE OF THE MODULE	53
FIGURE 32: MECHANICAL DIMENSIONS OF EM05 (UNIT: MM)	54
FIGURE 33: STANDARD DIMENSIONS OF M.2 TYPE 3042-S3 (UNIT: MM)	55
FIGURE 34: M.2 NOMENCLATURE	
FIGURE 35: TOP VIEW OF THE MODULE	56
FIGURE 36: BOTTOM VIEW OF THE MODULE	56



1 Introduction

This document defines EM05 module and describes its air interface and hardware interfaces which are connected with customers' applications.

This document can help customers to quickly understand the interface specifications, electrical and mechanical details, as well as other related information of EM05 module. To facilitate its application in different fields, reference design is also provided for customers' reference. Associated with application note and user guide, customers can use the module to design and set up mobile applications easily.



1.1. Safety Information

The following safety precautions must be observed during all phases of the operation, such as usage, service or repair of any cellular terminal or mobile incorporating EM05. Manufacturers of the cellular terminal should send the following safety information to users and operating personnel, and incorporate these guidelines into all manuals supplied with the product. If not so, Quectel assumes no liability for the customers' failure to comply with these precautions.



Full attention must be given to driving at all times in order to reduce the risk of an accident. Using a mobile while driving (even with a handsfree kit) causes distraction and can lead to an accident. You must comply with laws and regulations restricting the use of wireless devices while driving.



Switch off the cellular terminal or mobile before boarding an aircraft. Make sure it is switched off. The operation of wireless appliances in an aircraft is forbidden, so as to prevent interference with communication systems. Consult the airline staff about the use of wireless devices on boarding the aircraft, if your device offers an Airplane Mode which must be enabled prior to boarding an aircraft.



Switch off your wireless device when in hospitals, clinics or other health care facilities. These requests are designed to prevent possible interference with sensitive medical equipment.



Cellular terminals or mobiles operating over radio frequency signal and cellular network cannot be guaranteed to connect in all conditions, for example no mobile fee or with an invalid (U)SIM card. While you are in this condition and need emergent help, please remember using emergency call. In order to make or receive a call, the cellular terminal or mobile must be switched on and in a service area with adequate cellular signal strength.



Your cellular terminal or mobile contains a transmitter and receiver. When it is ON, it receives and transmits radio frequency energy. RF interference can occur if it is used close to TV set, radio, computer or other electric equipment.



In locations with potentially explosive atmospheres, obey all posted signs to turn off wireless devices such as your phone or other cellular terminals. Areas with potentially explosive atmospheres include fuelling areas, below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles such as grain, dust or metal powders, etc.



2 Product Concept

2.1. General Description

EM05 is a series of LTE/UMTS/HSPA+ wireless communication module with receive diversity. It provides data connectivity on LTE-FDD, LTE-TDD, DC-HSDPA, HSPA+, HSDPA, HSUPA, WCDMA and CDMA networks. It also provides optional GNSS functionality to meet customers' specific application demands. EM05 contains three variants: EM05-CE, EM05-CML and EM05-E*. Customers can select a dedicated type based on the region or operator. The following table shows the frequency bands of EM05 series module.

Table 1: Frequency Bands of EM05 Series Module

Modules	LTE Bands	WCDMA Bands	CDMA Band	Rx-diversity	GNSS (Optional)
EM05-CE	FDD: B1/B3/B5/B8 TDD: B38/B39/B40/B41	WCDMA: B1/B8	BC0	Supported	- GPS,
EM05-CML	TDD: B38/B39/B40/B41	1		Supported	GLONASS, BeiDou, Galileo,
EM05-E*	FDD: B1/B3/B7/B8/B20/B28 TDD: B38	WCDMA: B1/B8	/	Supported	QZSS

EM05 can be applied in the following fields:

- Rugged Tablet PC and Laptop Computer
- Remote Monitor System
- Handheld mobile device
- Wireless POS System
- Smart Metering System
- Other Wireless Terminal Devices



2.2. Key Features

The following table describes the detailed features of EM05.

Table 2: Key Features of EM05

Feature	Details
Function Interface	PCI Express M.2 Standard Interface
Power Supply	Supply voltage: 3.135V~4.4V Typical supply voltage: 3.3V
Transmitting Power	 Class 3 (24dBm+1/-3dB) for WCDMA bands Class 3 (23dBm±2dB) for LTE-FDD bands Class 3 (23dBm±2dB) for LTE-TDD bands Class 3 (24dBm±1dB) for CDMA BC0
LTE Features	Support up to non-CA Cat 4 Support 1.4 to 20MHz RF bandwidth Support MIMO in DL direction FDD: Max 150Mbps (DL), 50Mbps (UL) TDD: Max 130Mbps (DL), 35Mbps (UL)
UMTS Features	Support 3GPP R8 DC-HSDPA, HSPA+, HSDPA, HSUPA and WCDMA Support QPSK, 16-QAM and 64-QAM modulation DC-HSDPA: Max 42Mbps (DL) HSUPA: Max 5.76Mbps (UL) WCDMA: Max 384Kbps (DL), Max 384Kbps (UL)
CDMA2000 Features	Support 3GPP2 CDMA2000 1X Advanced, CDMA2000 1x EV-DO Rev.A EVDO: Max 3.1Mbps (DL), 1.8Mbps (UL) 1X Advanced: Max 307.2Kbps (DL), 307.2Kbps (UL)
Internet Protocol Features	Support TCP/UDP/PPP/FTP/HTTP/NTP/PING/QMI/NITZ/HTTPS/ SMTP/ MMS/FTPS/SMTPS/SSL/FILE* protocols Support PAP (Password Authentication Protocol) and CHAP (Challenge Handshake Authentication Protocol) protocols which are usually used for PPP connections
SMS	Text and PDU mode Point to point MO and MT SMS cell broadcast SMS storage: ME by default
(U)SIM Interface	Support (U)SIM card: 1.8V, 3.0V
Audio Interface	Support one digital audio interface: PCM interface WCDMA: AMR/AMR-WB LTE: AMR/AMR-WB



	Support echo cancellation and noise suppression
PCM Interface	Support 8-bit A-law*, µ-law* and 16-bit linear data formats Support long frame synchronization* and short frame synchronization Support master and slave mode, but must be the master in long frame synchronization
USB Interface	Compliant with USB 2.0 specification (slave only), the data transfer rate can reach up to 480Mbps Used for AT command communication, data transmission, firmware upgrade, software debugging and GNSS NMEA output Support USB drivers for Windows XP, Windows Vista, Windows 7, Windows 8/8.1, Windows 10, WinCE 5.0/6.0/7.0*, Linux 2.6/3.x/4.1, Android 4.x/5.x/6.0
Antenna Interface	Include main antenna, diversity antenna and GNSS antenna interfaces
Rx-diversity	Support LTE/WCDMA Rx-diversity
GNSS Features	Gen 8C Lite of Qualcomm Protocol: NMEA 0183
AT Commands	Compliant with 3GPP TS 27.007, 27.005 and Quectel enhanced AT commands
Physical Characteristics	Size: (42±0.15)mm × (30±0.15)mm × (2.3+0.1/-0.2)mm Weight: approx. 6g
Temperature Range	Operation temperature range: -30°C ~ +70°C ¹⁾ Extended temperature range: -40°C ~ +85°C ²⁾
Firmware Upgrade	USB interface and DFOTA
RoHS	All hardware components are fully compliant with EU RoHS directive

NOTES

- 1. 1) Within operating temperature range, the module is 3GPP compliant.
- 2. ²⁾ Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P_{out} might reduce in their value and exceed the specified tolerances. When the temperature returns to normal operating temperature levels, the module will meet 3GPP specifications again.
- 3. "*" means under development.



2.3. Functional Diagram

The following figure shows a block diagram of EM05.

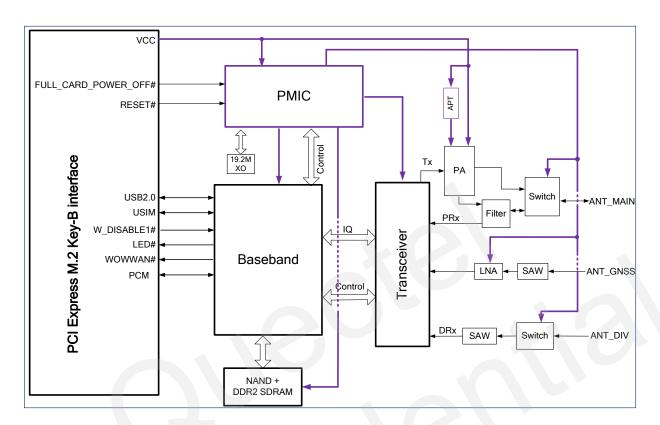


Figure 1: Functional Diagram



3 Application Interfaces

The physical connections and signal levels of EM05 comply with PCI Express M.2 specifications. This chapter mainly describes the definition and application of the following interfaces of EM05:

- Power supply
- (U)SIM card interface
- USB interface
- PCM and I2C interface
- Control and indicator signals
- Configuration pins



3.1. Pin Assignment

The following figure shows the pin assignment of EM05.

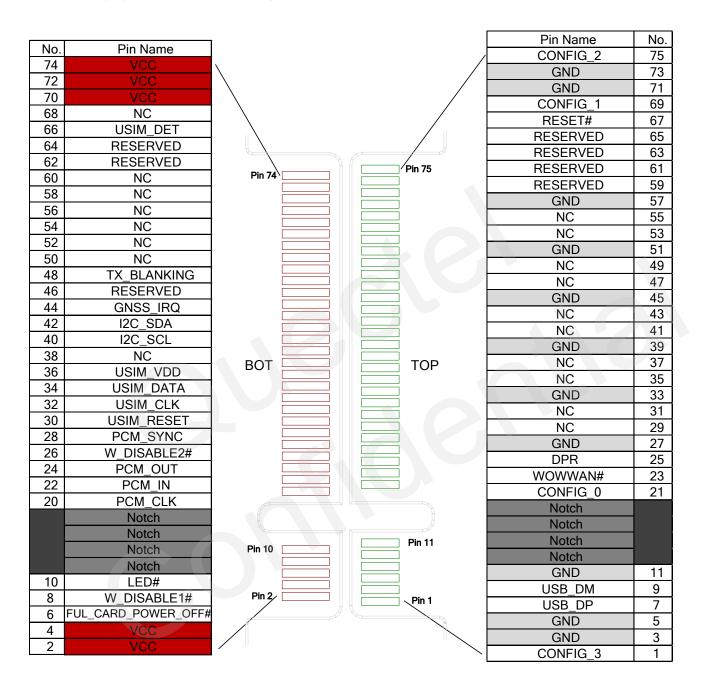


Figure 2: Pin Assignment



3.2. Pin Description

The following tables show the pin definition and description of EM05 on the 75-pin application.

Table 3: Definition of I/O Parameters

Туре	Description
Ю	Bidirectional
DI	Digital input
DO	Digital output
OD	Open drain
PI	Power input
PO	Power output

Table 4: Description of Pins

Pin No.	M.2 Socket 2 SSIC Pinout	EM05 Pin Name	I/O	Description	Comment
1	CONFIG_3	CONFIG_3		Connected to GND internally. EM05 is configured as WWAN-SSIC-0.	
2	3.3V	VCC	PI	Power supply	3.135V~4.4V
3	GND	GND		Ground	
4	3.3V	VCC	PI	Power supply	3.135V~4.4V
5	GND	GND		Ground	
6	FUL_CARD_ POWER_OFF#	FUL_CARD_ POWER_OFF#	DI	A signal control to power on/off the module. When it is at low level, the module powers off. When it is at high level, the module powers on. It is pulled to low level internally. It is 3.3V tolerant and can be driven by either 1.8V or 3.3V GPIO.	1.8V/3.3V



7	USB_D+	USB_DP	Ю	USB differential data bus (+)	
8	W_DISABLE1#	W_DISABLE1#	DI	Airplane mode control. Active low.	1.8/3.3V.
9	USB_D-	USB_DM	Ю	USB differential data bus (-)	
10	GPIO_9	LED#	OD	It is an open drain and active low signal. Requires a pull up resistor on the host. It is used to indicate the RF status of the module.	If unused, keep it open.
11	GND	GND		Ground	
12	Key	Notch		Notch	
13	Key	Notch		Notch	
14	Key	Notch		Notch	
15	Key	Notch		Notch	
16	Key	Notch		Notch	
17	Key	Notch		Notch	
18	Key	Notch		Notch	
19	Key	Notch		Notch	
20	GPIO_5 (AUDIO_0)	PCM_CLK	Ю	PCM clock. In master mode, it is an output signal. In slave mode, it is an input signal. If unused, keep it open.	1.8V
21	CONFIG_0	CONFIG_0		Unconnected internally. EM05 is configured as WWAN-SSIC-0.	
22	GPIO_6 (AUDIO_1)	PCM_IN	DI	PCM data input	1.8V
23	GPIO_11 (WAKE_ON_ WWAN#)	WOWWAN#	OD	A signal to wake up the host. It is open drain and active low. Requires a pull up resistor on the host.	If unused, keep it open.
24	GPIO_7 (AUDIO_2)	PCM_OUT	DO	PCM data output	1.8V
25	DPR	DPR*	DI	Body specific absorption rate (SAR) detection	1.8V
26	GPIO_10 W_DISABLE2#	W_DISABLE2#*	DI	GPS control Active low	1.8V
27	GND	GND		Ground	



28	GPIO_8- AUDIO_3	PCM_SYNC	Ю	PCM data frame synchronization signal	1.8V
29	SSIC-TxN	NC		NC	
30	UIM-RESET	USIM_RESET	DO	Reset signal of (U)SIM card	1.8V/3.0V
31	SSIC-TxP	NC		NC	
32	UIM-CLK	USIM_CLK	DO	Clock signal of (U)SIM card clock	1.8V/3.0V
33	GND	GND		Ground	
34	UIM-DATA	USIM_DATA	Ю	Data signal of (U)SIM card data	1.8V/3.0V
35	SSIC-RxN	NC		NC	
36	UIM-PWR	USIM_VDD	РО	Power supply for (U)SIM card	1.8V/3.0V
37	SSIC-RxP	NC		NC	
38	N/C	NC		NC	
39	GND	GND		Ground	
40	GPIO_0 (GNSS_SCL)	I2C_SCL	DO	I2C serial clock Used for external codec	Pulled up to 1.8V internally
41	N/C	NC		NC	
42	GPIO_1 (GNSS_SDA)	I2C_SDA	10	I2C serial data Used for external codec	Pulled up to 1.8V internally
43	N/C	NC		NC	
44	GPIO_2 (GNSS_IRQ)	GNSS_IRQ*	DI		1.8V
45	GND	GND		Ground	
46	GPIO_3 (SYSCLK)	RESERVED		Reserved	
47	N/C	NC		NC	
48	GPIO_4 (TX_BLANKING)	TX_BLANKING*	DO	Tx blanking signal for external GNSS module	1.8V
49	N/C	NC		NC	
50	N/C	NC		NC	
51	GND	GND		Ground	
52	N/C	NC		NC	



53	N/C	NC		NC	
54	N/C	NC		NC	
55	N/C	NC		NC	
56	N/C	NC		NC	
57	GND	GND		Ground	
58	N/C	NC		NC	
59	ANTCTL0	RESERVED		Reserved	
60	COEX3	NC		NC	
61	ANTCTL1	RESERVED		Reserved	
62	COEX2	RESERVED		Reserved	
63	ANTCTL2	RESERVED		Reserved	
64	COEX1	RESERVED		Reserved	
65	ANTCTL3	RESERVED		Reserved	
66	SIM_DETECT	USIM_DET	DI	(U)SIM card insertion detection	1.8V
67	RESET#	RESET#	DI	Reset the module. Active low.	1.8V
68	SUSCLK (32kHz)	NC		NC	
69	CONFIG_1	CONFIG_1		Connected to GND internally. EM05 is configured as WWAN-SSIC-0.	
70	3.3V	VCC	PI	Power supply	3.135V~4.4V
71	GND	GND		Ground	
72	3.3V	VCC	PI	Power supply	3.135V~4.4V
73	GND	GND		Ground	
74	3.3V	VCC	PI	Power supply	3.135V~4.4V
75	CONFIG_2	CONFIG_2		Connected to GND internally. EM05 is configured as WWAN-SSIC-0.	



NOTES

- 1. The typical supply voltage of VCC is 3.3V.
- 2. Keep all NC, reserved and unused pins unconnected.
- 3. "*" means under development.
- 4. EM05-CML does not support I2C interface.

3.3. Operating Modes

The table below briefly summarizes the various operating modes referred in the following chapters.

Table 5: Overview of Operating Modes

Mode	Details			
Normal	Idle	Software is active. The module has registered on the network, and it is ready to send and receive data.		
Operation	Talk/Data	Network connection is ongoing. In this mode, the power consumption is decided by network setting and data transfer rate.		
Minimum Functionality Mode	AT+CFUN command can set the module to a minimum functionality mode without removing the power supply. In this case, both RF function and (U)SIM card will be invalid.			
Airplane Mode AT+CFUN command or W_DISABLE1# pin can set the module into airplating this case, RF function will be invalid.				
In this mode, the current consumption of the module will be reduced to the Sleep Mode level. During this mode, the module can still receive paging message, SMS and TCP/UDP data from the network normally.				
Power Down In this mode, the power management unit shuts down the power supply. Software Mode not active. Operating voltage (connected to VCC) remains applied.				

3.4. Power Saving

3.4.1. Sleep Mode

EM05 is able to reduce its current consumption to a minimum value during the sleep mode. The following section describes power saving procedure of EM05 module.



3.4.1.1. USB Application with USB Remote Wakeup Function

If the host supports USB suspend/resume and remote wakeup function, the following two preconditions must be met to let the module enter into the sleep mode.

- Execute AT+QSCLK=1 command to enable the sleep mode.
- The host's USB bus, which is connected with the module's USB interface, enters into suspended state.

The following figure shows the connection between the module and the host.

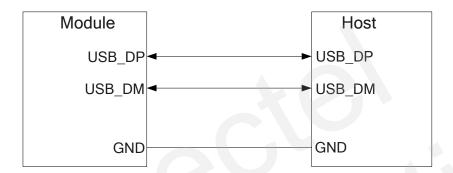


Figure 3: Sleep Mode Application with USB Remote Wakeup

- Sending data to EM05 through USB will wake up the module.
- When EM05 has a URC to report, the module will send remote wake-up signals via USB bus so as to wake up the host.

3.4.1.2. USB Application with USB Suspend/Resume and WOWWAN# Functions

If the host supports USB suspend/resume, but does not support remote wake-up function, the WOWWAN# signal is needed to wake up the host.

There are two preconditions to let the module enter into the sleep mode.

- Execute AT+QSCLK=1 command to enable the sleep mode.
- The host's USB bus, which is connected with the module's USB interface, enters into suspended state.



The following figure shows the connection between the module and the host.

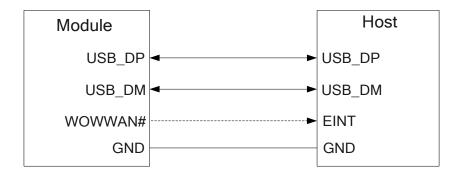


Figure 4: Sleep Mode Application with WOWWAN#

- Sending data to EM05 through USB will wake up the module.
- When EM05 has a URC to report, WOWWAN# signal will wake up the host.

3.4.2. Airplane Mode

When the module enters into airplane mode, the RF function does not work, and all AT commands correlative with RF function will be inaccessible. This mode can be set via the following ways.

Hardware:

The W_DISABLE1# pin is pulled up by default; driving it to low level will let the module enter into airplane mode.

Software:

AT+CFUN command provides the choice of the functionality level.

- AT+CFUN=0: Minimum functionality mode; both (U)SIM and RF functions are disabled.
- AT+CFUN=1: Full functionality mode (by default).
- AT+CFUN=4: Airplane mode. RF function is disabled.

For details of related AT commands, please refer to document [2].

NOTES

- 1. The W_DISABLE1# control function is disabled in firmware by default. It can be enabled by AT+QCFG="airplanecontrol" command. This command is under development.
- 2. The execution of AT+CFUN command will not affect GNSS function.



3.5. Power Supply

The following table shows pin definition of VCC pins and ground pins.

Table 6: Definition of VCC and GND Pins

Pin No.	Pin Name	I/O	Power Domain	Description
2, 4, 70, 72, 74	VCC	PI	3.135V~4.4V	3.3V DC supply
3, 5, 11, 27, 33, 39, 45, 51, 57, 71, 73	GND		4	Ground

3.5.1. Decrease Voltage Drop

The power supply range of the module is from 3.135V to 4.4V. Please make sure that the input voltage will never drop below 3.135V. The following figure shows the voltage drop during Tx power in 3G and 4G networks.

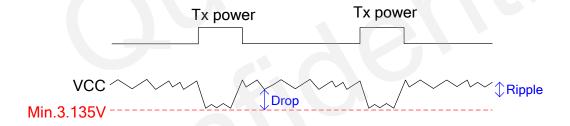


Figure 5: Power Supply Limits during Tx power

To decrease voltage drop, a bypass capacitor of about $220\mu\text{F}$ with low ESR (ESR= 0.7Ω) should be used, and a multi-layer ceramic chip capacitor (MLCC) array should also be reserved due to its ultra-low ESR. It is recommended to use three ceramic capacitors (100nF, 33pF, 10pF) for composing the MLCC array, and place these capacitors close to VCC pins. The main power supply from an external application has to be a single voltage source. The width of VCC trace should be no less than 2mm. In principle, the longer the VCC trace is, the wider it will be.

In addition, in order to get a stable power source, it is suggested that you should use a zener diode which dissipation power is more than 0.5W. The following figure shows reference circuit of VCC.



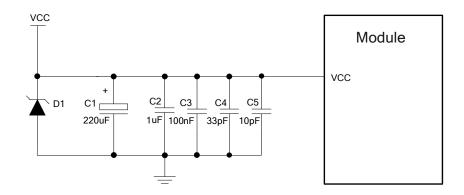


Figure 6: Reference Circuit of VCC

3.5.2. Reference Design for Power Supply

Power design for the module is very important, as the performance of the module largely depends on the power source. The power supply is capable of providing sufficient current up to 2A at least. If the voltage drop between the input and output is not too high, it is suggested that an LDO should be used to supply power for the module. If there is a big voltage difference between the input source and the desired output (VCC), a buck converter is preferred to be used as the power supply.

The following figure shows a reference design for +5V input power source. The typical output of the power supply is about 3.3V and the maximum load current is 3A.

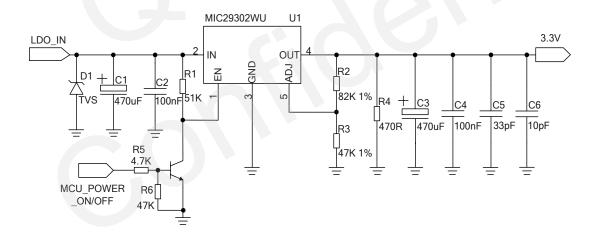


Figure 7: Reference Design of Power Supply

NOTE

In order to avoid damaging internal flash, please do not switch off the power supply when the module works normally. It is suggested that the power supply can be cut off after pulling down RESET# for about 100ms.



3.5.3. Monitor the Power Supply

AT+CBC command can be used to monitor the VCC voltage value. For more details, please refer to document [2].

3.6. Turn on and off Scenarios

3.6.1. Turn on the Module Using the FUL_CARD_POWER_OFF#

The following table shows the pin definition of FUL_CARD_POWER_OFF#.

Table 7: Description of FUL_CARD_POWER_OFF# Pin

Pin Name	Pin No.	Description	DC Characteristics	Comment
FUL_CAR D_POWER _OFF#	6	A signal control to power on/off the module. When it is at low level, the module powers off. When it is at high level, the module powers on. It is pulled to low level internally.	For 1.8V: V _{IH} max=2.1V V _{IH} min=1.19V V _{IL} max=0.5V For 3.3V: V _{IH} max=3.6V V _{IH} min=2.0V V _{IL} max=0.8V	Pulled down internally

EM05 can be turned on by driving the FUL_CARD_POWER_OFF# pin to a high level.

It is recommended to use a GPIO from host to control the FUL_CARD_POWER_OFF#. A simple reference circuit is illustrated in the following figure.

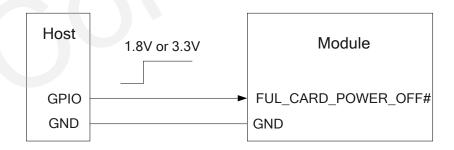


Figure 8: Turn on the Module Using GPIO

The module can also turn on automatically. The FUL_CARD_POWER_OFF# should be pulled up to 1.8V or 3.3V (recommended) through a resistor, whose resistance should be $5k\Omega\sim10k\Omega$. In this case, when the power supply of VCC is cut off, the module will be shut down.



A reference circuit is shown in the following figure.

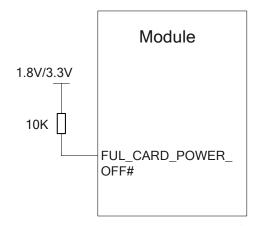


Figure 9: Turn on the Module Automatically

The turn on scenario is illustrated in the following figure.

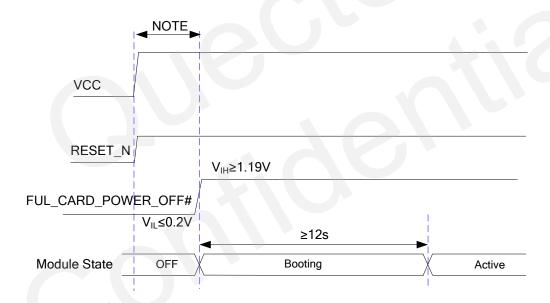


Figure 10: Timing of Turning on Module

NOTE

Please make sure that VCC is stable before pulling up FUL_CARD_POWER_OFF# pin. The time between them is no less than 30ms.



3.6.2. Turn off the Module

The following procedures can be used to turn off the module:

- Hardware shutdown: Turn off the module using the FUL_CARD_POWER_OFF# pin.
- Software shutdown: Turn off the module using AT+QPOWD command.

3.6.2.1. Turn off the Module Using the FUL_CARD_POWER_OFF# Pin

Driving the FUL_CARD_POWER_OFF# pin to low, the supply of PMIC will be powered off, then the module will be forced to shut down. But this may damage the internal flash, it is recommended to drive the FUL_CARD_POWER_OFF# pin to low after pulling down RESET# for about 100ms.

The power-down scenario is illustrated in the following figure.

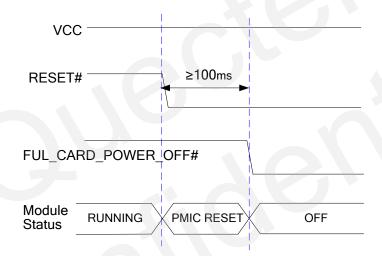


Figure 11: Timing of Turning off the Module Through FUL_CARD_POWER_OFF#

3.6.2.2. Turn off the Module Using AT Command

It is a safe way to use **AT+QPOWD** command to turn off the module. Please pull down FUL_CARD_POWER_OFF# pin, or cut off power supply of VCC after the module is shut down, otherwise, the module will be powered on again.



The power-down scenario is illustrated as the following figure.

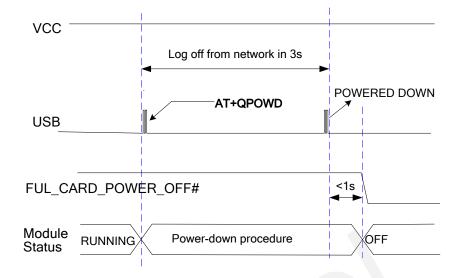


Figure 12: Timing of Turning off the Module Through AT Command

During power-down procedure, the module will log off from network and save important data. After the module is logged off, it sends "POWERED DOWN" and shuts down the internal power supply. If the "POWERED DOWN" URC is outputted, then the power on VCC pins can be cut off.

3.7. Reset the Module

The RESET# pin can be used to reset the module. The module can enter into reset state by driving RESET# to a low level voltage for 150ms~460ms.

Table 8: RESET_N Pin Description

Pin Name	Pin No.	Description	DC Characteristics	Comment
			V _{IH} max=2.1V	
RESET#	67	Reset the module	V _{IH} min=1.3V	
			V _{IL} max=0.5V	

An open drain/collector driver or button can be used to control the RESET#.



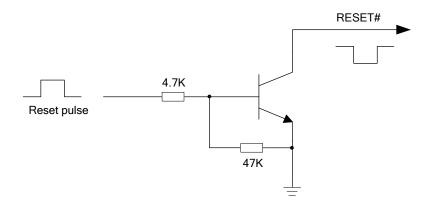


Figure 13: Reference Circuit of RESET# by Using Driving Circuit

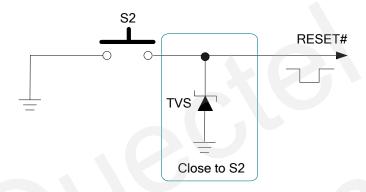


Figure 14: Reference Circuit of RESET# by Using Button

The reset scenario is illustrated in the following figure.

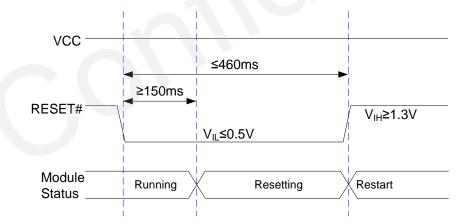


Figure 15: Timing of Resetting Module

NOTE

Please ensure that there is no large capacitance on RESET# pin.



3.8. (U)SIM Interface

The (U)SIM card interface circuitry meets ETSI and IMT-2000 requirements. Both 1.8V and 3.0V (U)SIM cards are supported.

Table 9: Pin Definition of the (U)SIM Interface

Pin Name	Pin No.	I/O	Description	Comment
USIM_VDD	36	РО	Power supply for (U)SIM card	Either 1.8V or 3.0V is supported by the module automatically.
USIM_DATA	34	Ю	Data signal of (U)SIM card	
USIM_CLK	32	DO	Clock signal of (U)SIM card	
USIM_RESET	30	DO	Reset signal of (U)SIM card	
USIM_DET	66	DI	(U)SIM card insertion detection. Active high.	Pulled up to 1.8V internally. When (U)SIM card is present, it is at high level (pulled up to 1.8V). When (U)SIM card is absent, it is at low level.

EM05 supports (U)SIM card hot-plug via the USIM_DET pin, which is a level trigger pin. The USIM_DET is normally short-circuited to ground when (U)SIM card is not inserted. When the (U)SIM card is inserted, the USIM_DET will change from low level to high level. The rising edge will indicate insertion of the (U)SIM card. When the (U)SIM card is pulled out, the SIM_DET will change from high level to low level. This falling edge will indicate the absence of the (U)SIM card.



The following figure shows a reference design for normally short-circuited (U)SIM card connector.

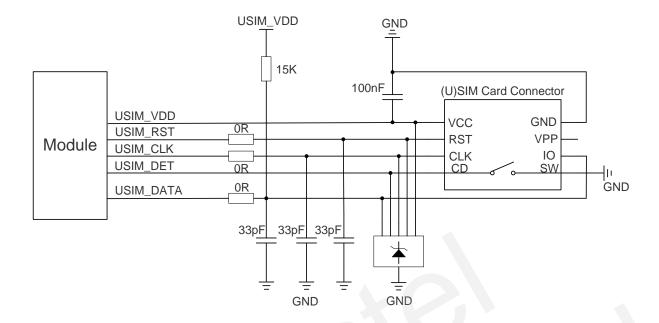


Figure 16: Reference Circuit of Normally Short-Circuited (U)SIM Card Connector

Normally Short-Circuited (U)SIM Card Connector

- When the (U)SIM is absent, CD is short-circuited to SW and USIM_DET is at low level.
- When the (U)SIM is inserted, CD is open to SW and USIM_DET is at high level.

The following figure shows a reference design for normally open (U)SIM card connector.

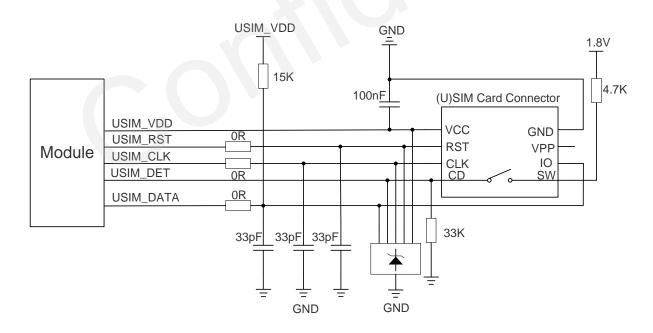


Figure 17: Reference Circuit of Normally Open (U)SIM Card Connector



Normally Open (U)SIM Card Connector

- When the (U)SIM is absent, CD is open to SW and USIM_DET is at low level.
- When the (U)SIM is inserted, CD is short-circuited to SW and USIM_DET is at high level.

If (U)SIM card detection function is not needed, please keep USIM_DET unconnected. A reference circuit for (U)SIM card interface with a 6-pin (U)SIM card connector is illustrated in the following figure.

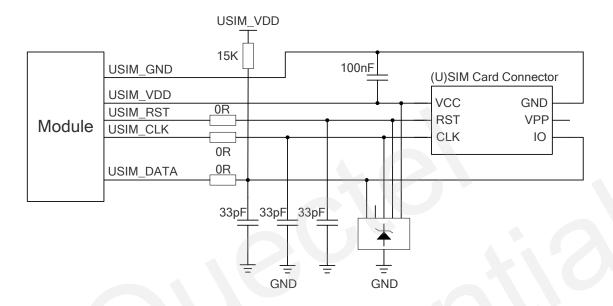


Figure 18: Reference Circuit of a 6-Pin (U)SIM Card Connector

In order to enhance the reliability and availability of the (U)SIM card in customers' applications, please follow the criteria below in (U)SIM circuit design:

- Keep placement of (U)SIM card connector to the module as close as possible. Keep the trace length as less than 200mm as possible.
- Keep (U)SIM card signals away from RF and VCC traces.
- Assure the ground between the module and the (U)SIM card connector short and wide. Keep the trace width of ground and USIM_VDD no less than 0.5mm to maintain the same electric potential.
- To avoid cross-talk between USIM_DATA and USIM_CLK, keep them away from each other and shield them with surrounded ground.
- In order to offer good ESD protection, it is recommended to add a TVS diode array whose parasitic capacitance should not be more than 10pF. The 0Ω resistors should be added in series between the module and the (U)SIM card so as to suppress EMI spurious transmission and enhance ESD protection. The 33pF capacitors are used for filtering interference of RF. Please note that the (U)SIM peripheral circuit should be close to the (U)SIM card connector.
- The pull-up resistor on USIM_DATA line can improve anti-jamming capability when long layout trace and sensitive occasion are applied, and should be placed close to the (U)SIM card connector.



3.9. USB Interface

The following table shows the pin definition of USB interface.

Table 10: Pin Definition of USB Interface

Pin No.	Pin Name	I/O	Description	Comment
7	USB_DP	Ю	USB differential data bus (+)	Require differential impedance of 90Ω
9	USB_DM	Ю	USB differential data bus (-)	Require differential impedance of 90Ω

EM05 is compliant with USB 2.0 specification. It can only be used as a slave device. Meanwhile, it supports high speed (480Mbps) and full speed (12Mbps) mode. The USB interface is used for AT command communication, data transmission, GNSS NMEA output, software debugging and firmware upgrade. The following figure shows the reference circuit of USB interface.

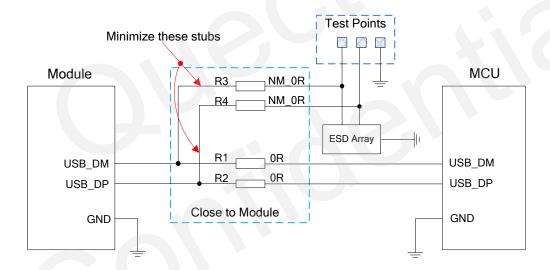


Figure 19: Reference Circuit of USB Interface

In order to ensure the integrity of USB data line signal, R1, R2, R3 and R4 components must be placed close to the module, and also these resistors should be placed close to each other. The extra stubs of trace must be as short as possible.

In order to ensure the USB interface design corresponding with the USB 2.0 specification, please comply with the following principles:

• It is important to route the USB signal traces as differential pairs with total grounding. The impedance of USB differential trace is 90Ω.



- Do not route signal traces under crystals, oscillators, magnetic devices and RF signal traces. It is
 important to route the USB differential traces in inner-layer with ground shielding on not only upper
 and lower layers but also right and left sides.
- If USB connector is used, please keep the ESD protection components to the USB connector as close as possible. Pay attention to the influence of junction capacitance of ESD protection components on USB data lines. Typically, the capacitance value should be less than 1pF.
- Keep traces of USB data test points short to avoid noise coupled on USB data lines. If possible, reserve a 0 Ω resistor on these two lines.

3.10. PCM and I2C Interfaces

EM05 provides one Pulse Code Modulation (PCM) digital interface for audio design, which supports the following modes:

- Primary mode (short frame synchronization, works as both master and slave)
- Auxiliary mode* (long frame synchronization, works as master only)

In primary mode, the data is sampled on the falling edge of the PCM_CLK and transmitted on the rising edge. The PCM_SYNC falling edge represents the MSB. In this mode, PCM_CLK supports 128kHz, 256kHz, 512kHz, 1024kHz and 2048kHz for different speech codecs.

In auxiliary mode*, the data is sampled on the falling edge of the PCM_CLK and transmitted on the rising edge. The PCM_SYNC rising edge represents the MSB. In this mode, PCM interface operates with a 128kHz PCM_CLK and an 8kHz, 50% duty cycle PCM_SYNC only.

EM05 supports 8-bit A-law* and μ -law*, and also 16-bit linear data formats. The following figures show the primary mode's timing relationship with 8kHz PCM_SYNC and 2048kHz PCM_CLK, as well as the auxiliary mode's timing relationship with 8kHz PCM_SYNC and 128kHz PCM_CLK.

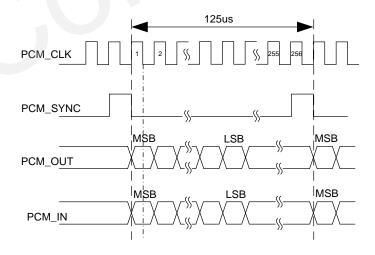


Figure 20: Primary Mode Timing



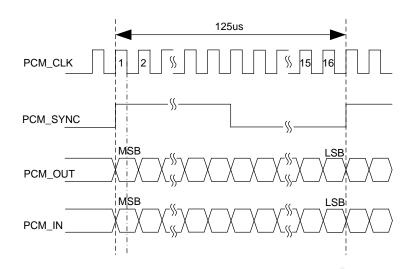


Figure 21: Auxiliary Mode Timing

The following table shows the pin definition of PCM and I2C interfaces which can be applied on audio codec design.

Table 11: Pin Definition of PCM and I2C Interfaces

Pin Name	Pin No.	1/0	Description	Comment
PCM_IN	22	DI	PCM data input	1.8V power domain
PCM_OUT	24	DO	PCM data output	1.8V power domain
PCM_SYNC	28	Ю	PCM data frame synchronization signal	1.8V power domain
PCM_CLK	20	10	PCM data bit clock	1.8V power domain
I2C_SCL	40	DO	I2C serial clock	Pulled up to 1.8V internally
I2C_SDA	42	Ю	I2C serial data	Pulled up to 1.8V internally

Clock and mode can be configured by AT command, and the default configuration is master mode using short frame synchronization format with 2048kHz PCM_CLK and 8kHz PCM_SYNC. Please refer to **document [2]** about **AT+QDAI** command for details.



The following figure shows a reference design of PCM interface with external codec IC.

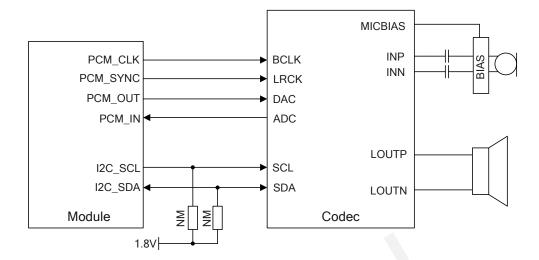


Figure 22: Reference Circuit of PCM Application with Audio Codec

NOTES

- 1. "*" means under development.
- It is recommended to reserve a RC (R=22Ω, C=22pF) circuit on the PCM lines, especially for PCM_CLK.
- 3. EM05 works as a master device pertaining to I2C interface.
- 4. EM05-CML does not support I2C interface.

3.11. Control and Indicator Signals

The following table shows the pin definition of control and indicator signals.

Table 12: Pin Definition of Control and Indicator Signals

Pin No.	Pin Name	I/O	Power Domain	Description
8	W_DISABLE1#	DI	3.3V	Airplane mode control. Active low.
10	LED#	OD		It is an open drain and active low signal. It is used to indicate the RF status of the module.
23	WOWWAN#	OD		A signal to wake up the host. It is open drain and active low.
26	W_DISABLE2#*	DI	1.8V	GPS control. Active low.



25	DPR*	DI	1.8V	Body SAR detection	
44	GNSS_IRQ*		1.8V		
48	TX_BLANKING*		1.8V		

NOTE

[&]quot;*" means under development.

3.11.1. W_DISABLE1# Signal

EM05 provides a W_DISABLE1# signal to disable or enable the RF function through hardware operation. Besides, the RF function can also be enabled or disabled through software AT commands. For more details, please refer to *Chapter 3.4.2*.

Table 13: Function of the W_DISABLE1#

W_DISABLE1#	RF Function
High Level	RF function is determined by software AT commands. Default: enabled.
Low Level	Disabled

3.11.2. LED# Signal

The LED# signal of EM05 is used to indicate the RF status of the module, which can absorb the current up to 40mA. According to the following circuit, in order to reduce the current of the LED, a resistor must be placed in series with the LED. The LED is emitting light when the LED# output signal is active low.




Figure 23: LED# Signal Reference Circuit Diagram

The following table shows the RF status indications of the LED# signal.



Table 14: RF Status Indications of LED# Signal

LED#	Description	
Low Level (Light on)	RF function is turned on	
High-impedance (Light off)	RF function is turned off if any of the following circumstances occurs: The card is not powered W_DISABLE1# signal is at low level. (Disable the RF) AT+CFUN=0 AT+CFUN=4	

3.11.3. WOWWAN# Signal

The WOWWAN# signal is an open drain signal, and requires a pull-up resistor on the host. When a URC returns, a 1s low level pulse will be outputted. The state of WOWWAN# signal is shown as below.

Table 15: State of the WOWWAN# Signal

No.	WOWWAN#	Operating Status
1	Output 1s low level (pulse signal)	Call/SMS/Data
2	Always at high level	Idle/Sleep

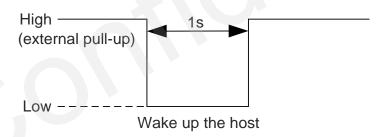


Figure 24: WOWWAN# Behavior



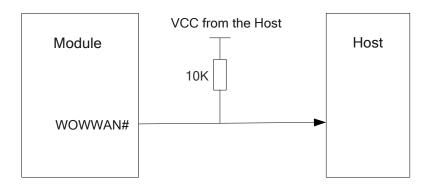


Figure 25: WOWWAN# Signal Reference Circuit Diagram

3.11.4. DPR Signal*

EM05 provides an input pin DPR (Dynamic Power Reduction) for body SAR detection. The signal is sent by a host system proximity sensor to the wireless device to provide an input trigger which will reduce output power in the radio transmit.

Table 16: Function of the DPR Signal

No.	DPR	Function
1	High/Floating	Max Tx power will NOT be backed off
2	Low	Max Tx power will be backed off by executing AT commands

NOTE

"*" means under development.



3.12. Configuration Pins

EM05 provides 4 configuration pins to configure the M.2 interface type, and it is configured as WWAN-SSIC 0 by default.

Table 17: Pin Definition of Configuration Pins

Pin No.	Pin Name	Description
1	CONFIG_3	Connected to GND internally.
21	CONFIG_0	NC
69	CONFIG_1	Connected to GND internally.
75	CONFIG_2	Connected to GND internally.

The 4 configuration pins on EM05 module are defined as below:

Table 18: List of Configuration Pins

Config_0	Config_1	Config_2	Config_3	Module Type and	Port
(Pin 21)	(Pin 69)	(Pin 75)	(Pin 1)	Main Host Interface	Configuration
NC	GND	GND	GND	WWAN-SSIC	0



4 GNSS Receiver

4.1. General Description

EM05 includes a fully integrated global navigation satellite system solution that supports Gen8C-Lite of Qualcomm (GPS, GLONASS, BeiDou, Galileo and QZSS).

EM05 supports standard NMEA-0183 protocol, and outputs NMEA sentences at 1Hz data update rate via USB interface by default.

By default, EM05 GNSS engine is switched off. It has to be switched on via AT command. For more details about GNSS engine technology and configurations, please refer to *document [3]*.



5 Antenna Interfaces

EM05 includes a main antenna interface, an Rx-diversity antenna interface which is used to resist the fall of signals caused by high speed movement and multipath effect, and a GNSS antenna interface. The antenna interfaces have an impedance of 50Ω . And the GNSS antenna interface is optional.

The antenna interfaces are shown below.



Figure 26: RF Antenna Connectors

5.1. Main/Rx-diversity Antenna Interfaces

Table 19: Module Operating Frequencies

3GPP Band	Transmit	Receive	Unit
B1	1920~1980	2110~2170	MHz
B3	1710~1785	1805~1880	MHz
B5	824~849	869~894	MHz
BC0	824~849	869~894	MHz
B8	880~915	925~960	MHz
B38	2570~2620	2570~2620	MHz



B39	1880~1920	1880~1920	MHz
B40	2300~2400	2300~2400	MHz
B41	2555~2655	2555~2655	MHz

5.2. GNSS Antenna Interface

The following table shows frequency specification of GNSS antenna interface.

Table 20: GNSS Frequency

Туре	Frequency	Unit
GPS/Galileo/QZSS	1575.42±1.023	MHz
GLONASS	1597.5~1605.8	MHz
BeiDou	1561.098±2.046	MHz

5.3. Antenna Installation

5.3.1. Antenna Requirement

The following table shows the requirements on main antenna, Rx-diversity antenna and GNSS antenna.

Table 21: Antenna Requirements

Туре	Requirements
	Frequency range: 1561MHz~1615MHz
	Polarization: RHCP or linear
	VSWR: <2 (Typ.)
CNCC	Passive antenna gain: >0dBi
GNSS	Active antenna noise figure: <1.5dB
	Active antenna gain: >-2dBi
	Active antenna embedded LNA gain: 20dB (Typ.)
	Active antenna total gain: >18dBi (Typ.)
MODMA/ODMA/LTC	VSWR: ≤2
WCDMA/CDMA/LTE	Gain (dBi): 1



Max input power (W): 50
Input impedance (ohm): 50
Polarization type: Vertical
Cable insertion loss: <1dB
(WCDMA B8, CDMA BC0, LTE B5/B8)
Cable insertion loss: <1.5dB
(WCDMA B1, LTE B1/B3)
Cable insertion loss <2dB
(LTE B38/B39/B40/B41)

5.3.2. Recommended RF Connector for Antenna Installation

EM05 supports antenna connection via buckled RF connectors. Buckled RF connector MM4829-2702 supplied by MURATA or other equivalent connectors are recommended. The dimensions of MM4829-2702 connector are shown as below.

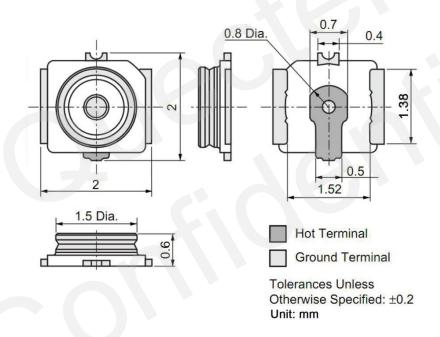


Figure 27: Dimensions of the MM4829-2702 Connector (Unit: mm)

Table 22: Major Specifications of MM4829-2702 Connector

Item	Specification
Nominal Frequency Range	DC to 6 GHz
Nominal Impedance	50Ω
Temperature Rating	-40°C to +85°C



	Meet the requirements of:
Voltage Standing Wave Ratio (VSWR)	Max 1.3 (DC~3GHz)
	Max 1.45 (3GHz~6GHz)

The standard 2mm \times 2mm RF receptacle connector to be used in conjunction with EM05 can be two types of mating plugs that meet a maximum height of 1.2mm using a Ø 0.81mm coax cable or a maximum height of 1.45mm utilizing a Ø 1.13mm coax cable.

The following figure shows the specifications of 0.81mm coaxial cable mating the recommended RF connector.

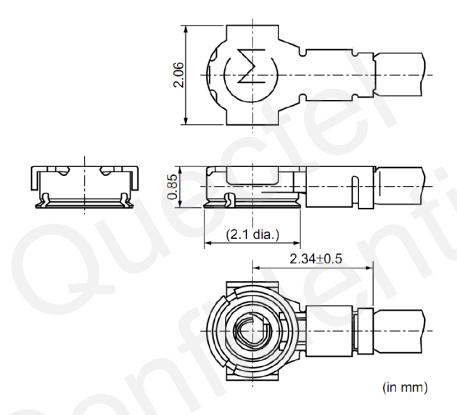


Figure 28: Specifications of 0.81mm Coaxial Cable

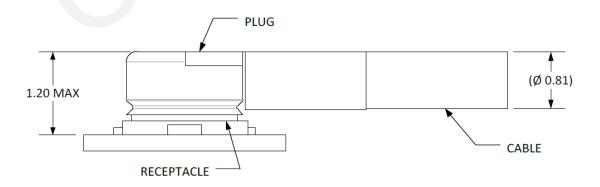


Figure 29: Connection between the RF Connector and the 0.81mm Coaxial Cable



The following figure shows the specifications of 1.13mm coaxial cable mating the recommended RF connector.

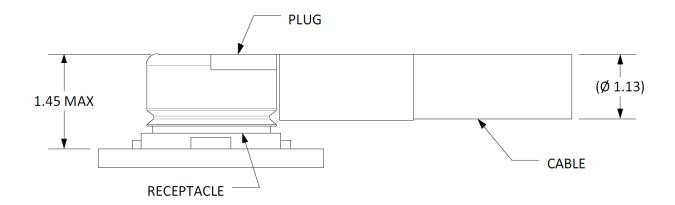


Figure 30: Connection between the RF Connector and the 1.13mm Coaxial Cable



6 Electrical, Reliability and Radio Characteristics

6.1. Absolute Maximum Ratings

Absolute maximum ratings for power supply and voltage on digital and analog pins of the module are listed in the following table.

Table 23: Absolute Maximum Ratings

Parameter	Min.	Max.	Unit
VCC	-0.3	4.7	V
Peak Current of VCC	0	1.0	A
Voltage at Digital Pins	-0.3	2.3	V

6.2. Power Supply Requirements

The input voltage of EM05 is $3.3V\pm5\%$, as specified by **document [1]**. The following table shows the power supply requirements of EM05.

Table 24: Power Supply Requirements

Parameter	Description	Min.	Тур.	Max.	Unit
VCC	Power Supply	3.135	3.3	4.4	V



6.3. I/O Requirements

Table 25: I/O Requirements

Parameter	Description	Min.	Max.	Unit
V _{IH}	Input high voltage	$0.7 \times V_{DD18}$	V _{DD18} +0.3	V
V _{IL}	Input low voltage	-0.3	0.3 × V _{DD18}	V
V _{OH}	Output high voltage	V _{DD18} -0.5	V_{DD18}	V
V _{OL}	Output low voltage	0	0.4	V

NOTE

The maximum voltage value of V_{IL} for RESET# signal and W_DISABLE1# signal is 0.5V.

6.4. Operating Temperature

Table 26: Operating Temperature

Parameter	Min.	Тур.	Max.	Unit
Operation Temperature Range ¹⁾	-30	+25	+70	°C
Extended Temperature Range ²⁾	-40		+85	°C

NOTES

- 1. ¹⁾Within operation temperature range, the module is 3GPP compliant.
- 2. ²⁾ Within extended temperature range, the module remains the ability to establish and maintain a voice, SMS, data transmission, emergency call, etc. There is no unrecoverable malfunction. There are also no effects on radio spectrum and no harm to radio network. Only one or more parameters like P_{out} might reduce in their value and exceed the specified tolerances. When the temperature returns to the normal operating temperature levels, the module will meet 3GPP specifications again.



6.5. Current Consumption

The values of current consumption are shown below.

Table 27: EM05-CE Current Consumption

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	5	uA
		AT+CFUN=0	2.3	mA
		WCDMA PF=64	3.3	mA
		WCDMA PF=128	3.0	mA
		WCDMA PF=256	2.8	mA
	Sleep state	FDD-LTE PF=64	3.9	mA
	(USB connected)	FDD-LTE PF=128	3.3	mA
		TDD-LTE PF=256	3.0	mA
		TDD-LTE PF=64	3.9	mA
I _{Vcc}		TDD-LTE PF=128	3.3	mA
		TDD-LTE PF=128	2.9	mA
- VCC		AT+CFUN=0 (USB connected)	25.0	mA
		WCDMA PF=64 (USB connected)	28.0	mA
		WCDMA PF=64 (USB disconnected)	18.0	mA
		BC0 @SCI=1 (USB connected)	31.0	mA
	Idle state	FDD-LTE PF=64 (USB connected)	29.0	mA
		FDD-LTE PF=64 (USB disconnected)	19.0	mA
		TDD-LTE PF=64 (USB connected)	29.0	mA
		TDD-LTE PF=64 (USB disconnected)	19.0	mA
	CDMA data transfer (GNSS off)	BC0 Max Power @24.08dBm	577.0	mA



	WCDMA B1 HSDPA @21.78dBm	570.0	mA
WCDMA data transfer	WCDMA B1 HSUPA @21.64dBm	570.0	mA
(GNSS off)	WCDMA B8 HSDPA @22.13dBm	530.0	mA
	WCDMA B8 HSUPA @22.19dBm	560.0	mA
	LTE-FDD B1 @23.25dBm	750.0	mA
	LTE-FDD B3 @23.35dBm	740.0	mA
	LTE-FDD B5 @23.04dBm	640.0	mA
LTE data transfer	LTE-FDD B8 @23.45dBm	640.0	mA
(GNSS off)	LTE-TDD B38 @23.41dBm	400.0	mA
	LTE-TDD B39 @23.41dBm	295.0	mA
	LTE-TDD B40 @23.17dBm	430.0	mA
	LTE-TDD B41 @23.37dBm	390.0	mA
WCDMA	WCDMA B1 @22.89dBm	600.0	mA
voice call	WCDMA B8 @22.82dBm	550.0	mA
CDMA	BC0 Max Power @23.93dBm	598.0	mA
voice call	BC0 Min Power @-60.07dBm	123.0	mA

Table 28: EM05-CML Current Consumption

Parameter	Description	Conditions	Тур.	Unit
	OFF state	Power down	5	uA
	AT+CFUN=0	2.3	mA	
	FDD-LTE PF=64	3.9	mA	
I _{Vcc}	I _{Vcc} Sleep state (USB connected)	FDD-LTE PF=128	3.3	mA
		TDD-LTE PF=256	3.0	mA
		TDD-LTE PF=64	3.9	mA
		TDD-LTE PF=128	3.3	mA



	TDD-LTE PF=128	2.9	mA
	AT+CFUN=0 (USB connected)	25.0	mA
	FDD-LTE PF=64 (USB connected)	29.0	mA
Idle state	FDD-LTE PF=64 (USB disconnected)	19.0	mA
	TDD-LTE PF=64 (USB connected)	29.0	mA
	TDD-LTE PF=64 (USB disconnected)	19.0	mA
	LTE-TDD B38 @23dBm	400.0	mA
LTE data transfer (GNSS OFF)	LTE-TDD B39 @23dBm	295.0	mA
	LTE-TDD B40 @23dBm	430.0	mA
	LTE-TDD B41 @23dBm	390.0	mA

6.6. RF Output Power

The following table shows the RF output power of EM05 module.

Table 29: EM05 Conducted RF Output Power

Frequency	Max.	Min.
LTE-FDD Bands	23dBm±2dB	<-44dBm
LTE-TDD Bands	23dBm±2dB	<-44dBm
CDMA Band	24dBm+2/-1dB	<-50dBm
WCDMA Bands	24dBm+1/-3dB	<-50dBm



6.7. RF Receiving Sensitivity

The following tables show conducted RF receiving sensitivity of EM05 series module.

Table 30: EM05-CML Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
LTE-TDD B38 (10M)	-97.5dBm	-99.0dBm	-101.2dBm	-96.3dBm
LTE-TDD B39 (10M)	-99.0dBm	-100.2dBm	-102.5dBm	-96.3dBm
LTE-TDD B40 (10M)	-98.0dBm	-98.2dBm	-101.3dBm	-96.3dBm
LTE-TDD B41 (10M)	-97.5dBm	-99.0dBm	-101.0dBm	-94.3dBm

Table 31: EM05-CE Conducted RF Receiving Sensitivity

Frequency	Primary	Diversity	SIMO	3GPP (SIMO)
LTE-TDD B38 (10M)	-97.5dBm	-99.0dBm	-101.2dBm	-96.3dBm
LTE-TDD B39 (10M)	-99.0dBm	-100.2dBm	-102.5dBm	-96.3dBm
LTE-TDD B40 (10M)	-98.0dBm	-98.2dBm	-101.3dBm	-96.3dBm
LTE-TDD B41 (10M)	-97.5dBm	-99.0dBm	-101.0dBm	-94.3dBm
LTE-FDD B1 (10M)	-98.5dBm	-99.0dBm	-101.7dBm	-97.0dBm
LTE-FDD B3 (10M)	-98.5dBm	-99.5dBm	-102.2dBm	-94.0dBm
LTE-FDD B5 (10M)	-98.7dBm	-100.2dBm	-102.7dBm	-95.0dBm
LTE-FDD B8 (10M)	-98.5dBm	-100.0dBm	-102.5dBm	-94.0dBm
WCDMA B1	-109.5dBm	\	\	-106.7dBm
WCDMA B8	-110.0dBm	\	\	-103.7dBm
CDMA BC0	-109.0dBm	\	\	-104dBm



6.8. ESD Characteristics

The following table shows the ESD characteristics of EM05.

Table 32: ESD Characteristics of EM05

Part	Contact Discharge	Air Discharge	Unit
Power Supply and GND	+/-4	+/-10	kV
Antenna Interface	+/-4	+/-8	kV
Others	+/-0.5	+/-1	kV

NOTE

For a good ESD performance, the module mounting holes must be used to attach the device to the main PCB ground closely.

6.9. Thermal Consideration

EM05 is designed to work over an extended temperature range. In order to achieve a maximum performance while working under extended temperatures or extreme conditions (such as with maximum power or data rate, etc.) for a long time, it is strongly recommended to add a heat sink (a thermal compound or pad must be used between the module and the metal heat sink) between the module and the main PCB for thermal dissipation.

Please add ground vias as many as possible on PCB for better heat dissipation. It is NOT recommended to apply solder mask on the main PCB below the thermal dissipation area of EM05, and the module should be kept away from heating sources.



The thermal dissipation area is shown as below. The dimensions are measured in mm.

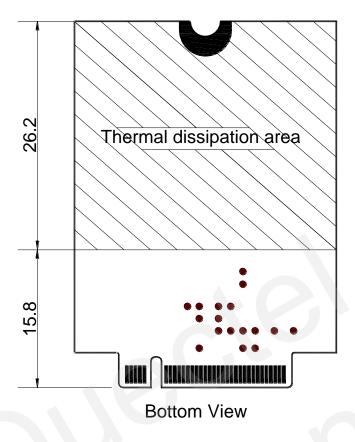


Figure 31: Thermal Dissipation Area on Bottom Side of the Module

The table below shows the heat dissipation performance after adding a heat sink between the module and the main PCB.

Table 33: Heat Dissipation Performance

Scenario	Testing Time	Temperature		
		Baseband	PA	Unit
No heat sink	15 minutes	112	112	°C
Add a heat sink	15 minutes	90	89	°C

NOTE

The test condition is: under ambient temperature 70°C with LTE Band 8, BW=20M and max power.



7 Mechanical Dimensions and Packaging

This chapter mainly describes mechanical dimensions and packaging specifications of EM05 module. All dimensions are measured in mm, and the tolerances for dimensions without tolerance values are ±0.05mm.

7.1. Mechanical Dimensions of the Module

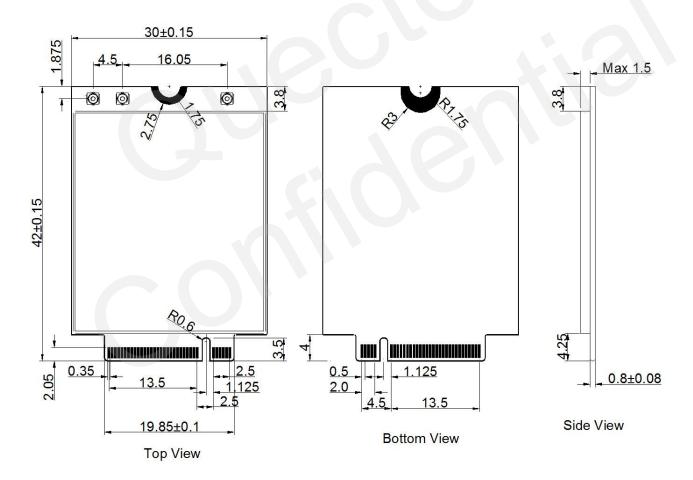


Figure 32: Mechanical Dimensions of EM05 (Unit: mm)



7.2. Standard Dimensions of M.2 PCI Express

The following figure shows the standard dimensions of M.2 PCI Express. Please refer to **document [1]** for details.


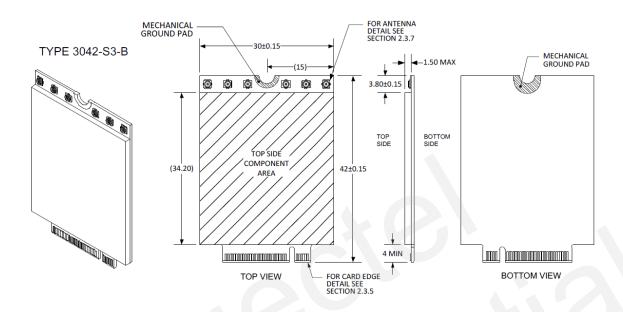


Figure 33: Standard Dimensions of M.2 Type 3042-S3 (Unit: mm)

According to M.2 nomenclature, EM05 is Type 3042-S3-B (30.0mm × 42.0mm, max component height on the top is 1.5mm and single-sided, key ID is B).

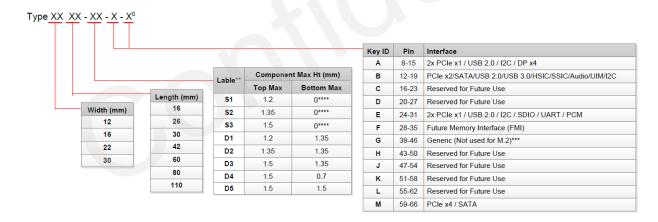

- * Use ONLY when a double slot is being specified
- ** Label included in height dimension
- *** Key G is intended for custom use. Devices with this key will not be M.2-compliant. Use at your own risk!
- **** Insulating label allowed on connector-based designs

Figure 34: M.2 Nomenclature



7.3. Design Effect Drawings of the Module



Figure 35: Top View of the Module



Figure 36: Bottom View of the Module

NOTE

These are design effect drawings of EM05 module. For more accurate pictures, please refer to the module that you get from Quectel.



7.4. M.2 Connector

EM05 adopts a standard PCI Express M.2 connector which compiles with the directives and standards listed in the *document* [1].

7.5. Packaging

The EM05 is packaged in tray. Each tray contains 10pcs of modules. The smallest package of EM05 contains 100pcs.



8 Appendix References

Table 34: Related Documents

SN	Document Name	Remark
[1]	PCI Express M.2 Specification	PCI Express Specification
[2]	Quectel_EM05_AT_Commands_Manual	EM05 AT Commands Manual
[3]	Quectel_EC2x&EG9x&EM05_GNSS_AT_ Commands_Manual	GNSS AT Commands Manual for EC25, EC21, EC20, EG95, EG91 and EM05 modules

Table 35: Terms and Abbreviations

Abbreviation	Description
bps	Bits Per Second
DC-HSPA+	Dual-carrier High Speed Packet Access
DFOTA	Delta Firmware Upgrade Over The Air
DL	Down Link
ESD	Electrostatic Discharge
FDD	Frequency Division Duplexing
GLONASS	GLObalnaya Navigatsionnaya Sputnikovaya Sistema, the Russian Global Navigation Satellite System
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GSM	Global System for Mobile Communications
HR	Half Rate
HSPA	High Speed Packet Access



HSUPA	High Speed Uplink Packet Access
kbps	Kilo Bits Per Second
LED	Light Emitting Diode
LTE	Long Term Evolution
Mbps	Million Bits Per Second
ME	Mobile Equipment (Module)
MIMO	Multiple-Input Multiple-Output
MLCC	Multiplayer Ceramic Chip Capacitor
MMS	Multimedia Messaging Service
MO	Mobile Originated
MT	Mobile Terminated
PDU	Protocol Data Unit
PPP	Point-to-Point Protocol
RF	Radio Frequency
Rx	Receive
SAR	Specific Absorption Rate
SMS	Short Message Service
Тх	Transmit
UART	Universal Asynchronous Receiver & Transmitter
UL	Up Link
URC	Unsolicited Result Code
(U)SIM	(Universal) Subscriber Identification Module
CDMA	Code Division Multiple Access
WCDMA	Wideband Code Division Multiple Access